

LG

HB-202CE

MODEL

SERVICE MANUAL

PREFACE

1. SAFETY PRECAUTIONS

Follow basic safety precautions before using electrical appliances.

1. **READ ALL INSTRUCTIONS.**
2. To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquid.
3. Do not touch hot surfaces. Always use oven mitts when handling the hot bread pan of bread.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug the unit from the outlet when not in use and before cleaning. Allow the breadmaker to cool before attaching or removing parts.
6. Do not touch moving parts.
7. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or it has been dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or mechanical adjustment.
8. Attachments that are not recommended or sold by the appliance manufacturer should not be used.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
11. Do not place on or near a gas or electric burner, or in a heated oven.
12. To disconnect, grip the plug and pull it out from the wall outlet. Never pull the cord.
13. Do not use the appliance for other than the intended use.
14. This product is intended for household use only.

2. SERVICING PRECAUTIONS


The following cautions should be observed when troubleshooting.

- a) As the appliance is made to be serviced only by properly qualified service personnel, it cannot be repaired by the user.
- b) Before servicing, you should keep your hands dry. The power cord must be unplugged to protect electrical hazards.
- c) Wear gloves when assembling or disassembling the appliance to avoid being injured by a sharp edge.



3. INSTALLATION INSTRUCTIONS

- a) Place the breadmaker allowing at least 4-inch air space around sides and top of the breadmaker.
- b) Always place the breadmaker on a heat-proof counter top or table during operation.
- c) This breadmaker must be placed on a firm, flat, and solid surface.
- d) 120V/60Hz rated Bread Machine has a polarized plug : one blade is wider than the other.
230V/50Hz rated Bread Machine has to be earthed.
- e) Extension cords are available and may be used if care is exercised in their use.
♦ EXTENSION CORD IS USED ♦
 1. The marked electrical rating of the extension cord should be at least as great as the appliance.
 2. The longer cord should be arranged so it will not drape over the counter top or tabletop where it can be pulled by children or tripped over.

BLOCK DIAGRAM

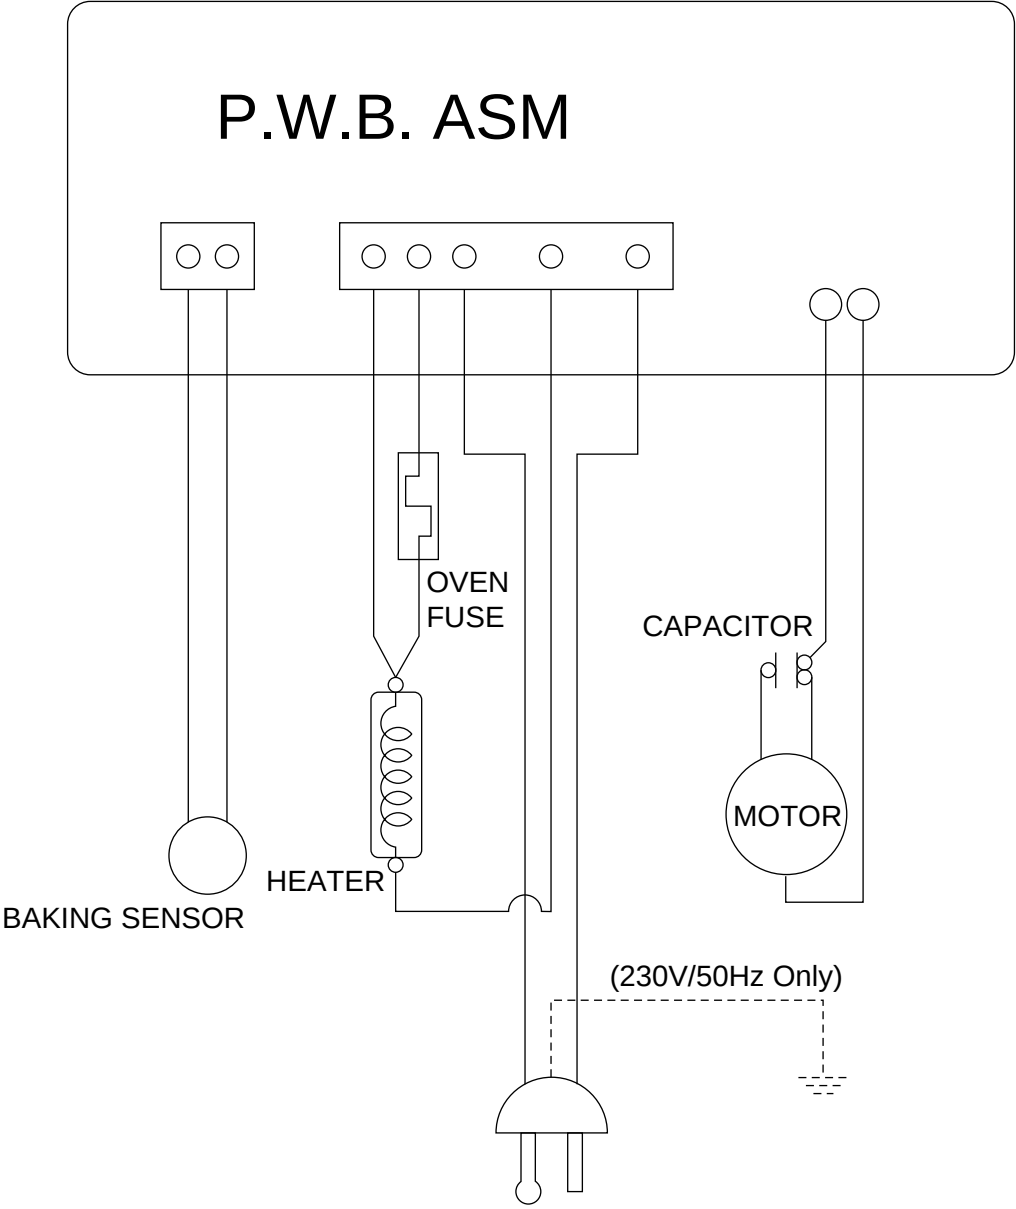

REMARKS

- 1.  :HOUSING
- 2.  :TERMINAL BLOCK
- 3.  :RECEPTACLE & TAP

SPECIFICATIONS

DESCRIPTION		AUTOMATIC BREADMAKER
MODEL		REFER TO THE COVER PAGE
POWER SUPPLY		INDICATED ON THE RATING LABEL
POWER CONSUMPTION	MAIN HEATER	550W
	KNEADING MOTOR	100/110W
DIMENSIONS(W × D × H)		APPROX. 13 3/4" × 9" × 13 3/4" (35 × 23 × 35cm)
WEIGHT		APPROX. 14.4lb.(6.7kg)
TIMER		4:10 TO 13:00 HOURS DIGITAL TIMER
CORD LENGTH		APPROX. 3 FEET, 3.4 INCHES (1.0m)
THERMAL FUSE	MAIN HEATER PROTECTOR	291°F/144°C
	KNEADING MOTOR PROTECTOR	248°F/120°C/130°C
ACCESSORIES		MEASURING CUP, MEASURING SPOON(OPTION)
SERIAL NO.		INDICATED ON THE RATING LABEL WITH PERMANENT INK

TROUBLESHOOTING GUIDE


When you get a complaint from your customer, evaluate the complaint carefully before going to the customer's home. If there are the following symptoms, please instruct the customer for the proper use of the breadmaker. This can save an unnecessary service call.


A. CHECKING POINTS BEFORE SERVICE


CONDITION	CAUSE	REMEDY
Breadmaker does not work.	Electric power is interrupted.	Wait.
	Remaining time display shows [HI] and does not work. (Inside of breadmaker is too hot.)	Wait until cool.
	Breadmaker plug is not Inserted tightly.	Insert breadmaker plug securely.
Breadmaker operates but does not knead.	Kneading blade is extracted.	Fix the kneading blade securely.
Breadmaker does not operate and display !A on remaining time display window after start.	Electric power has been interrupted during operation.	Empty bread pan and operate again.
A little smoke is emitted from the breadmaker.	Some material is spilled in the breadmaker when measuring ingredients.	Clean the inside of breadmaker and operate again.
Bread is not made well.	Water used is too hot or too cold.	Regulate the ingredients used. Referring the owner's manual.
	Ingredients are spoiled by being open for long time.	
	Used ingredients are not measured accurately.	

B. TROUBLESHOOTING GUIDE EXCEPT CIRCUIT BOARD


(TROUBLE 1) Breadmaker does not operate.

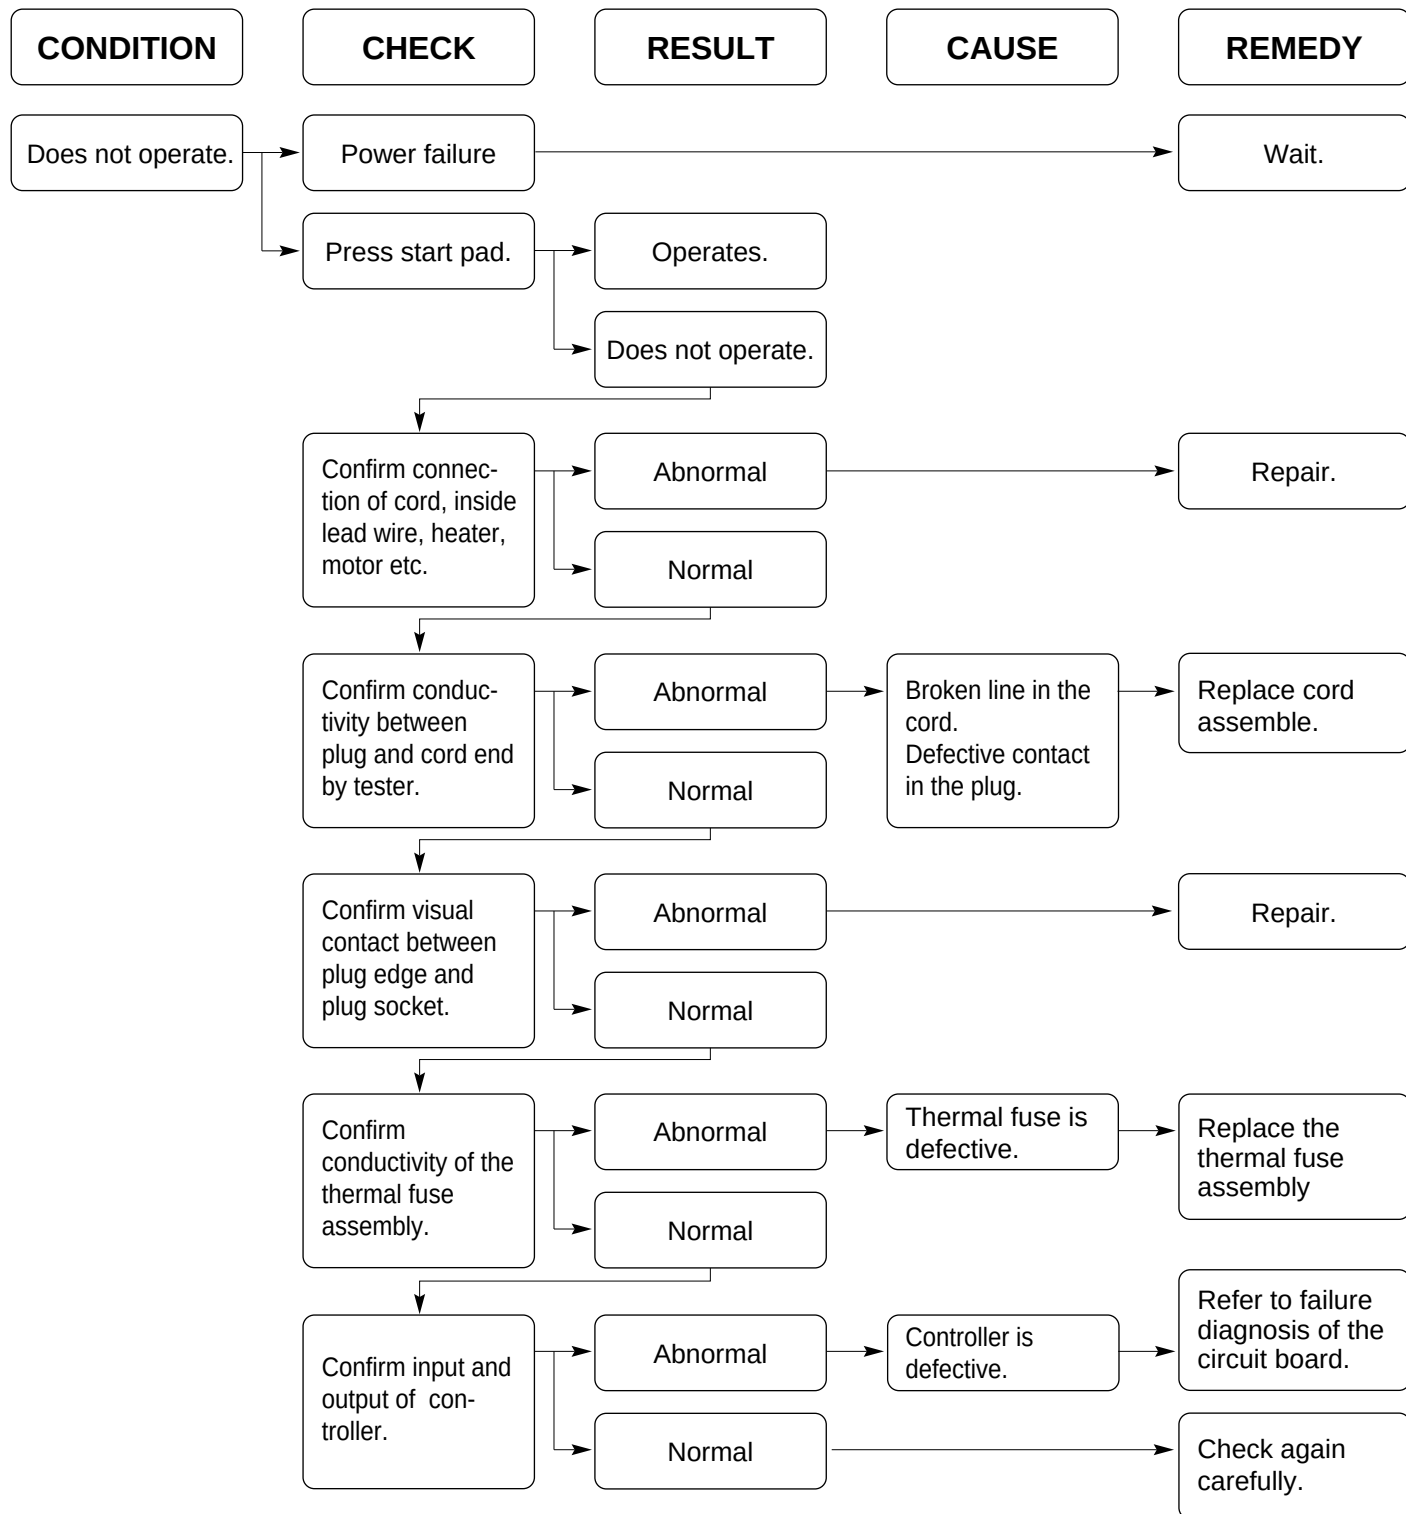


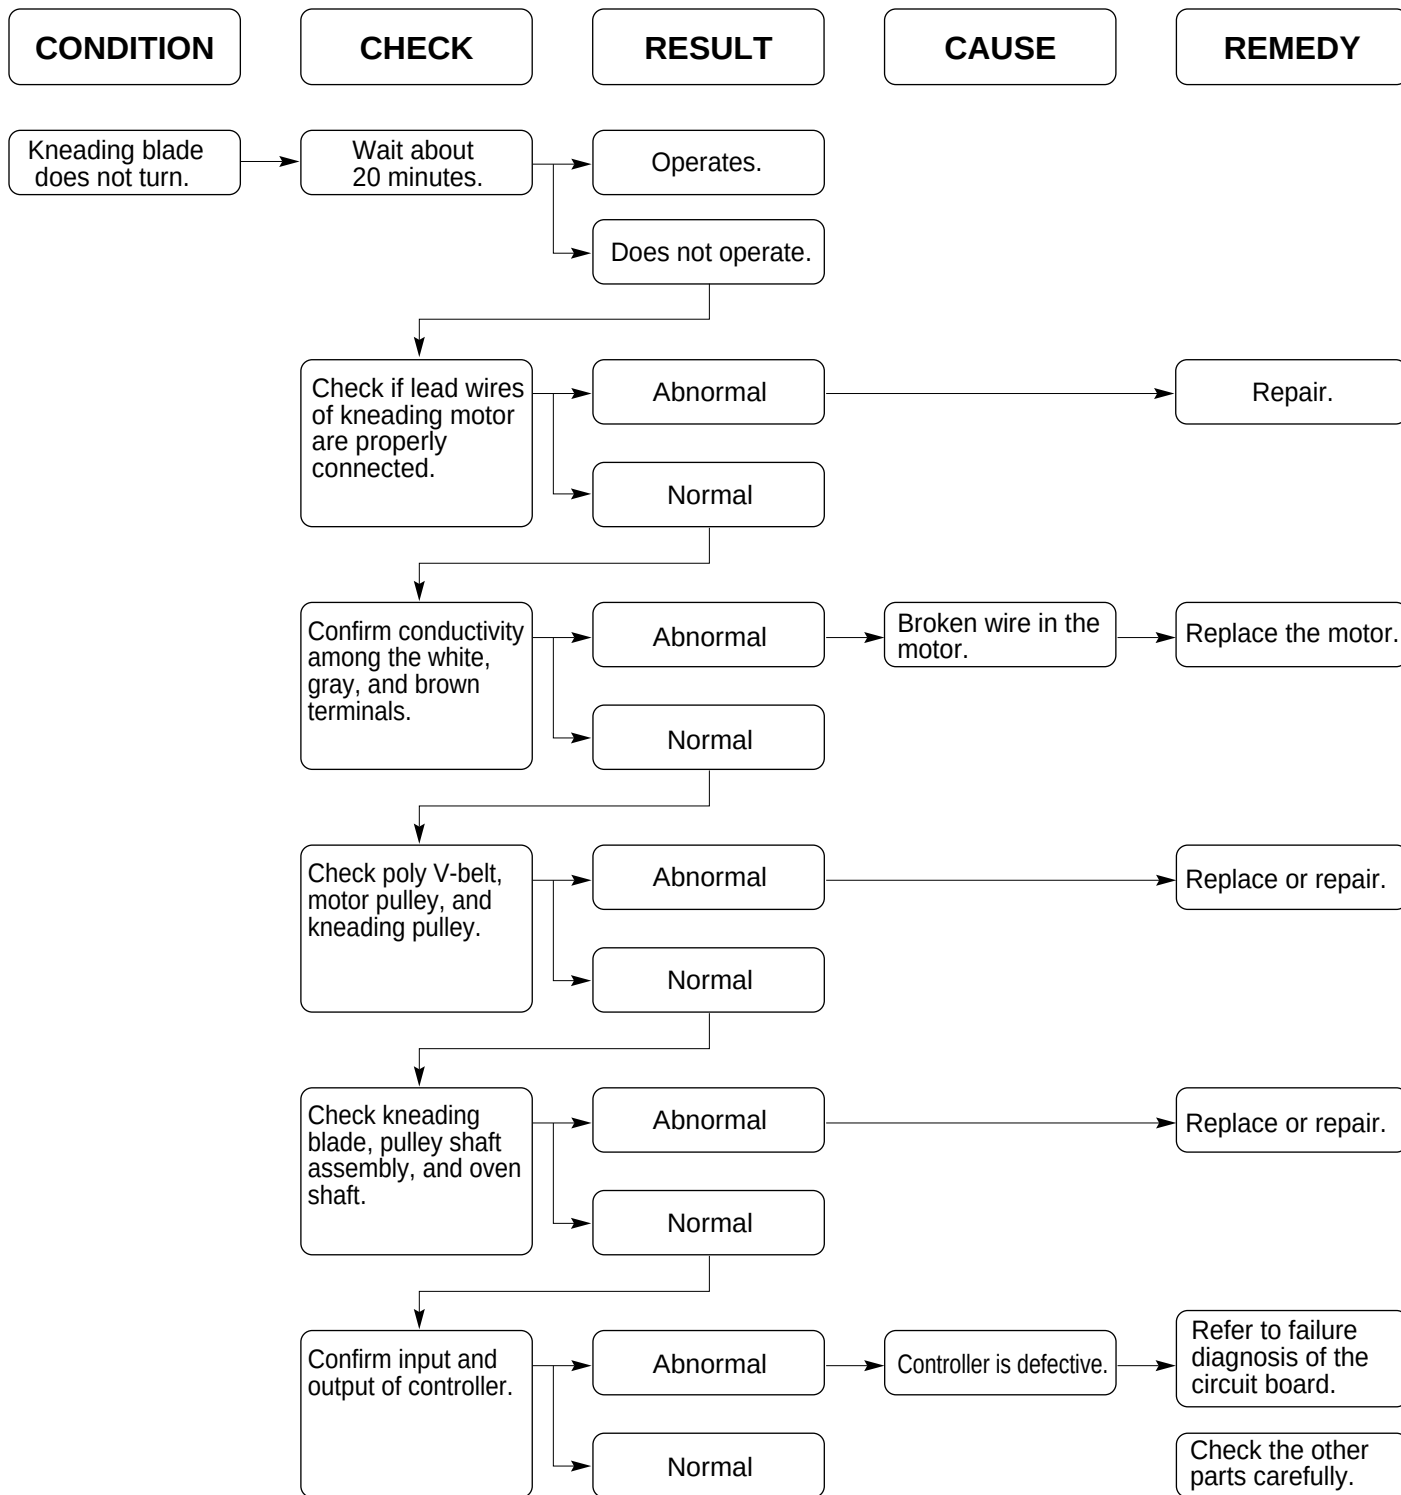


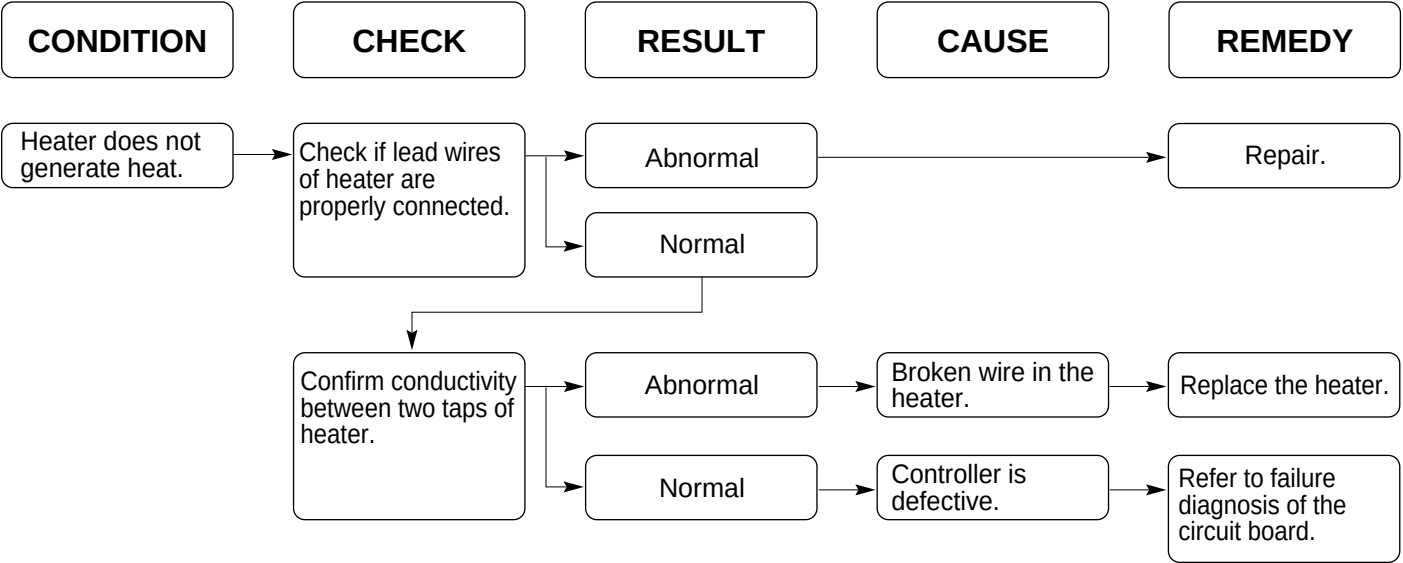



(TROUBLE 2) Poor bread is made.

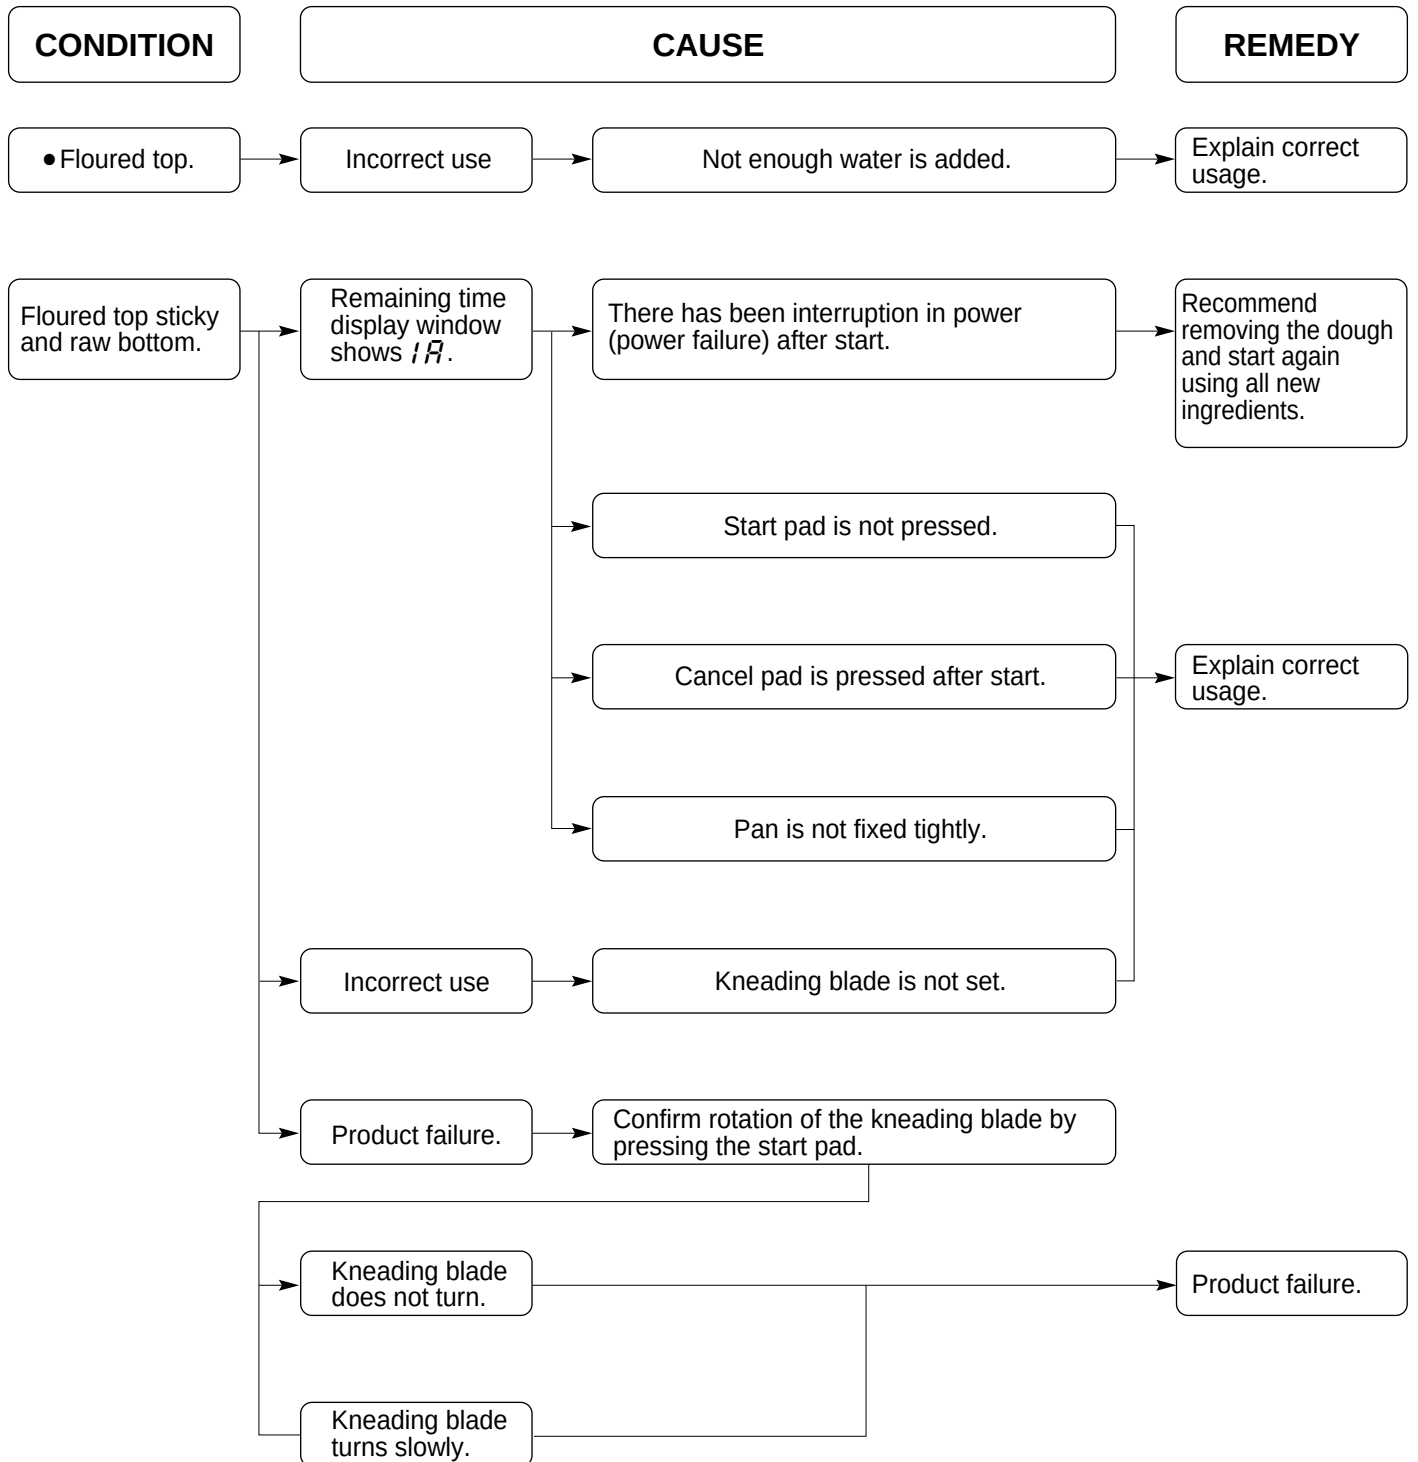

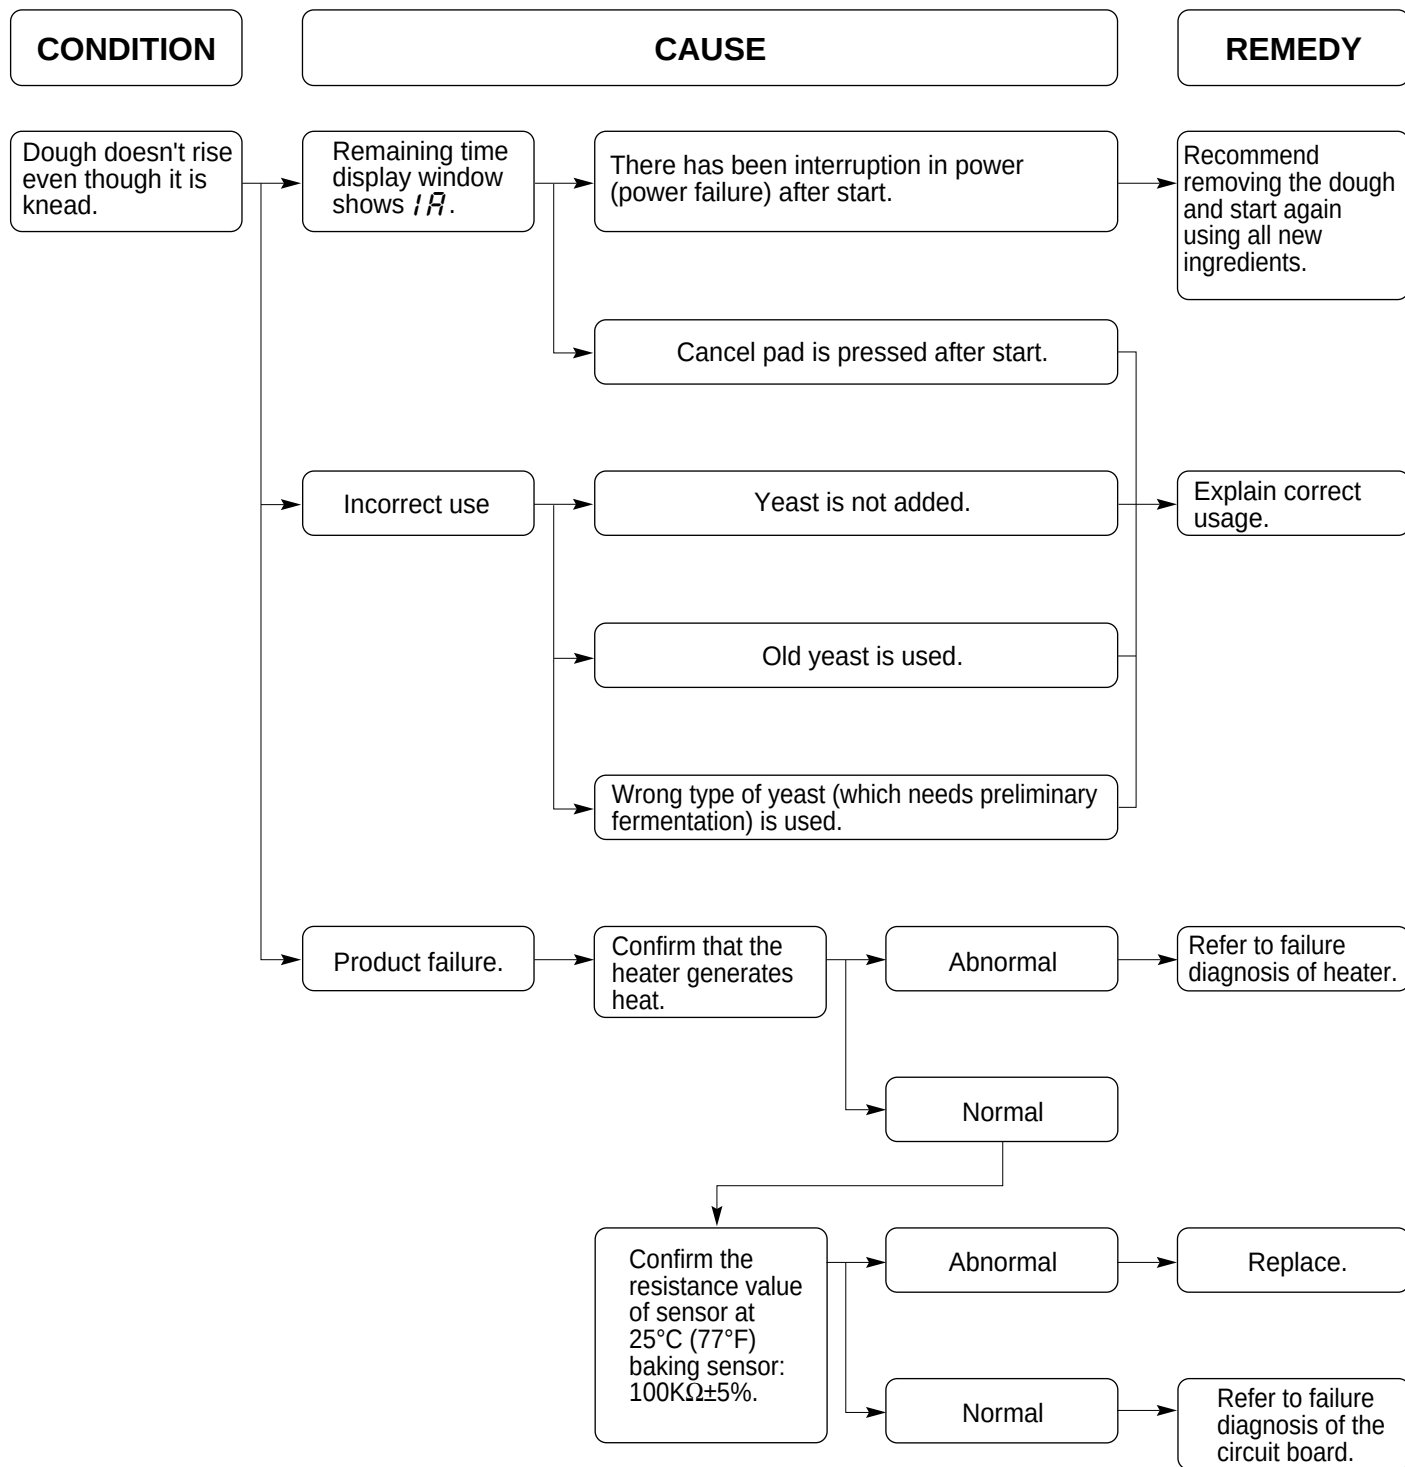


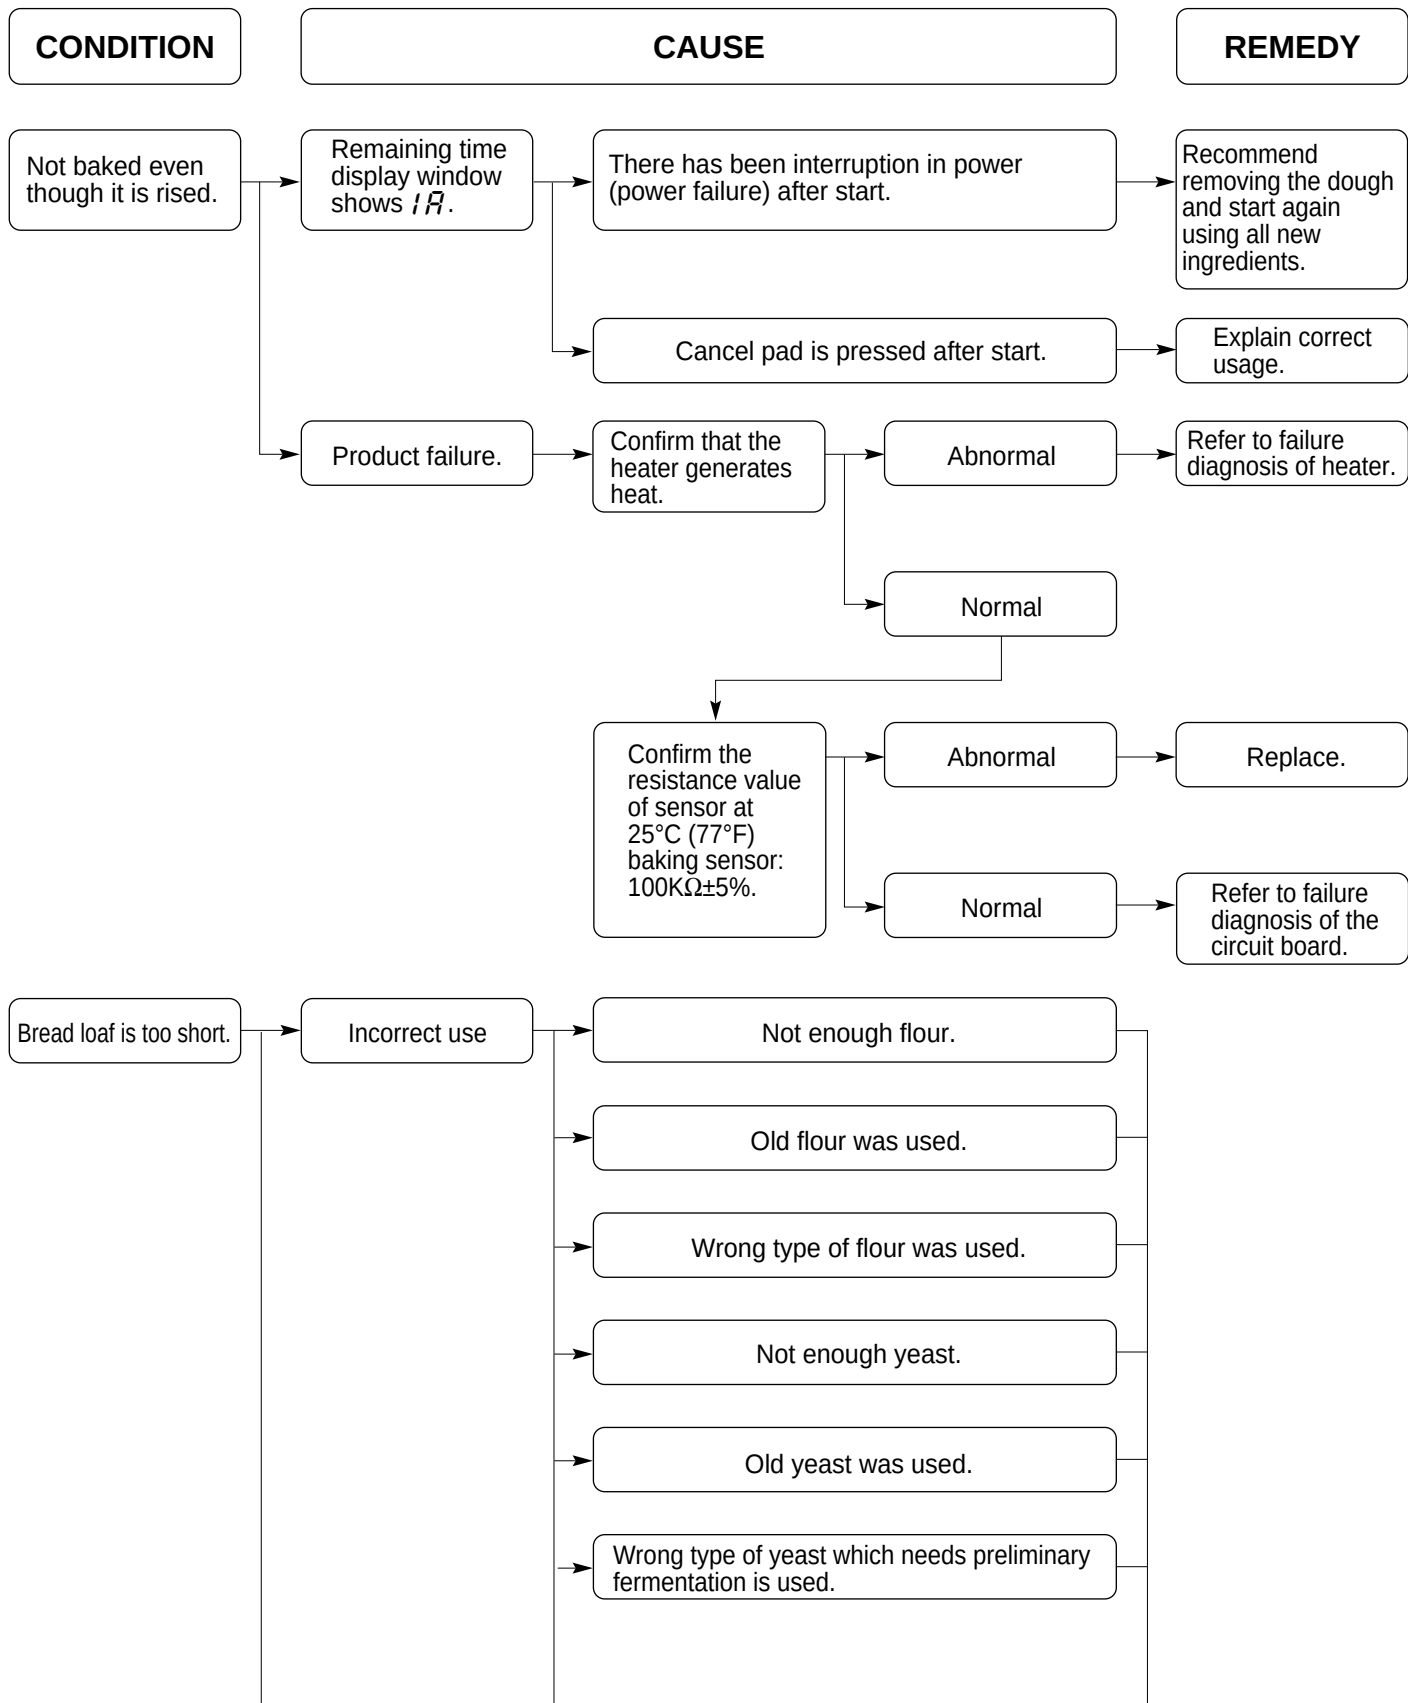


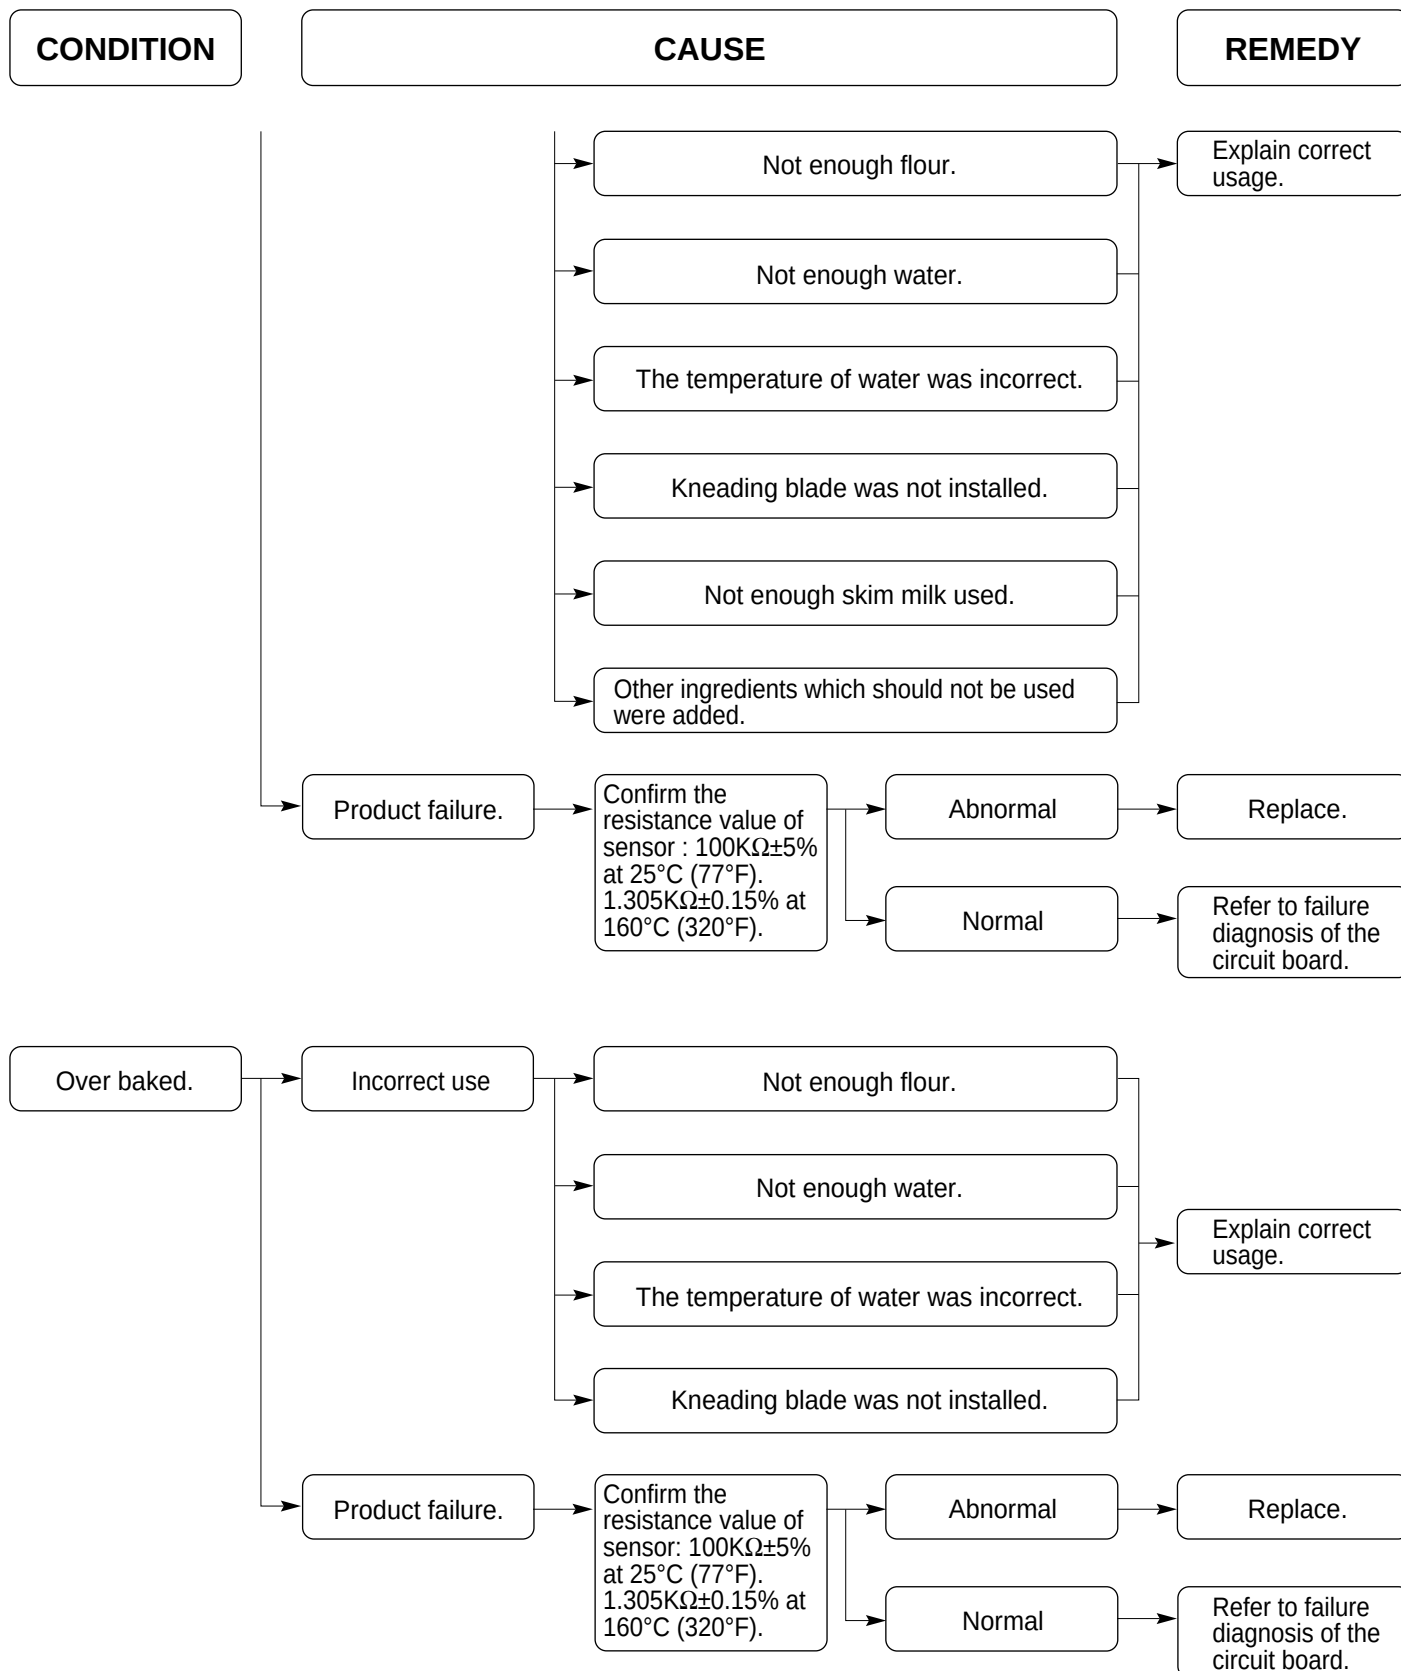

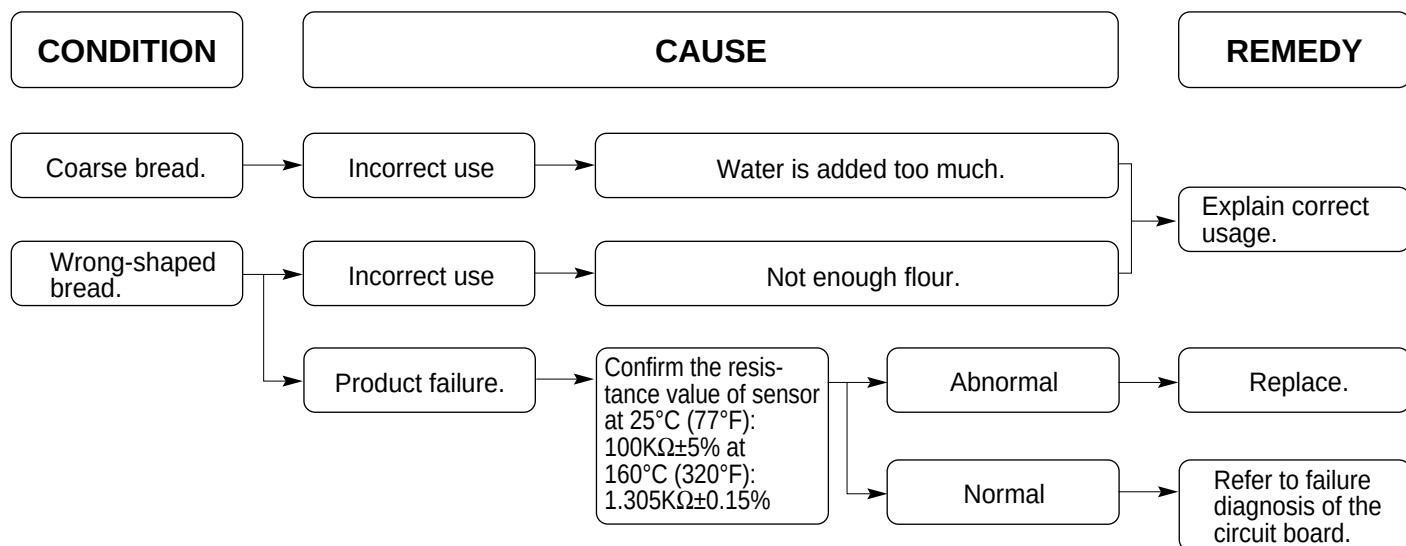

(TROUBLE 3) Other problems.


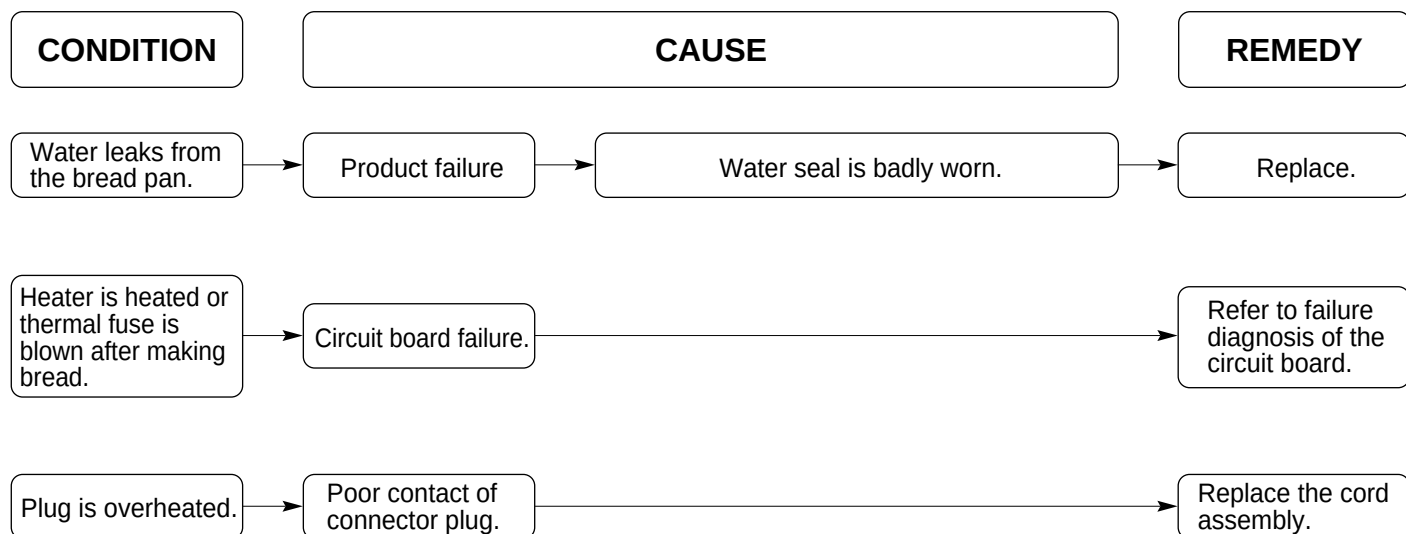


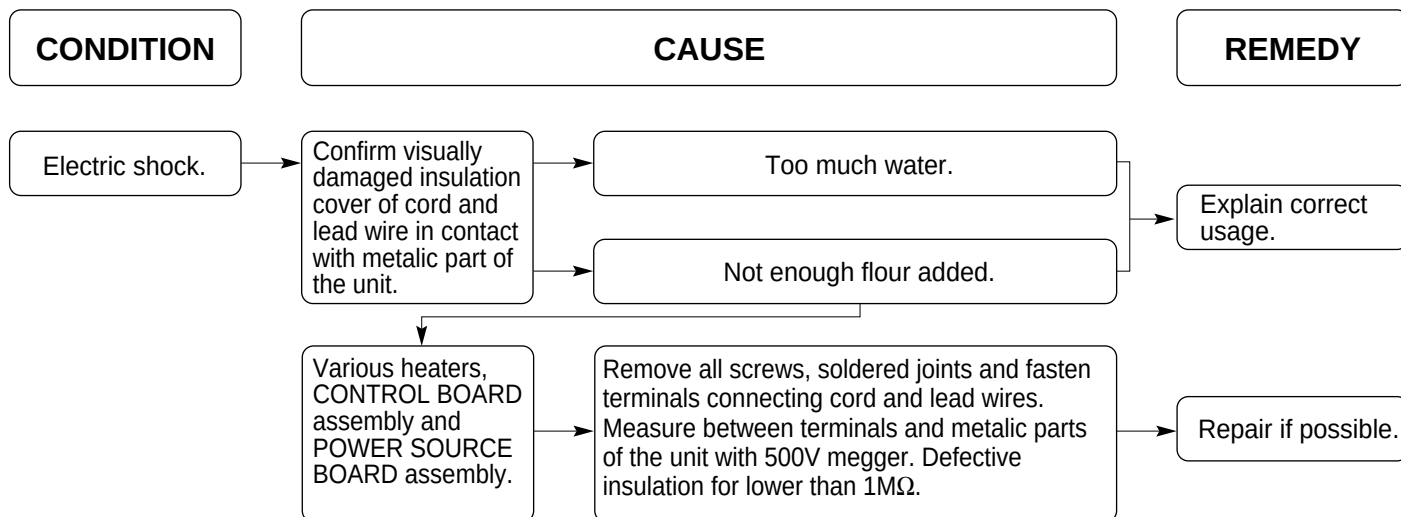


(TROUBLE 4) Some letter is displayed on remaining time display window.

Letter	Cause	Remedy
<i>H 1</i>	The temperature of oven area is too hot. (higher than 40°C/104°F)	Press CANCEL pad for cooling and start again.
<i>E r 3</i>	Baking sensor is defective (Resistance value is not 100KΩ±5% at 25°C (77°F): and 1.305KΩ±0.15% at 160°C (320°F)):	Repair or replace.

C. FAILURE DIAGNOSIS OF THE CIRCUIT BOARD

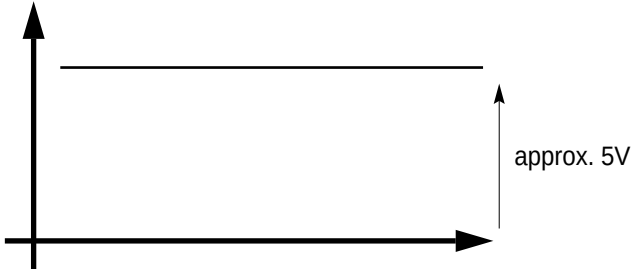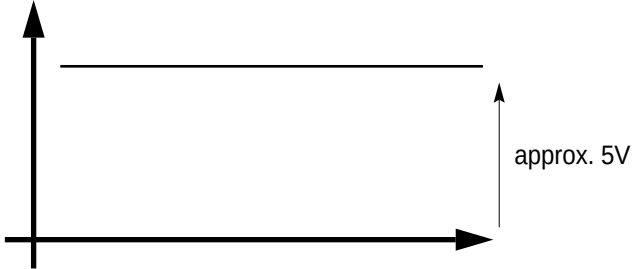CONDITION	CAUSE	REMEDY
1. Kneading motor does not turn.	See page 9 (OPERATION CHECK)	
Is the signal generated at pin No. 26 of IC1 as follows?  The diagram shows a horizontal axis with an arrow pointing right and a vertical axis with an arrow pointing up. A horizontal line is drawn at a high level, starting from the vertical axis and extending to the right. An arrow points from the text 'approx. 5V' to this high-level line. Yes Confirm the connection of Q601 R601 and repair or replace the POWER SOURCE BOARD assembly. No Replace the CONTROL board assembly.		
2. Main heater does not generate.	See page 9 (OPERATION CHECK)	
Is the signal generated at pin No. 27 of IC1 as follows?  The diagram shows a horizontal axis with an arrow pointing right and a vertical axis with an arrow pointing up. A horizontal line is drawn at a high level, starting from the vertical axis and extending to the right. An arrow points from the text 'approx. 5V' to this high-level line. Yes Confirm connection of Q602, R602 repair or replace the POWER SOURCE BOARD assembly. No Replace the CONTROL board assembly.		

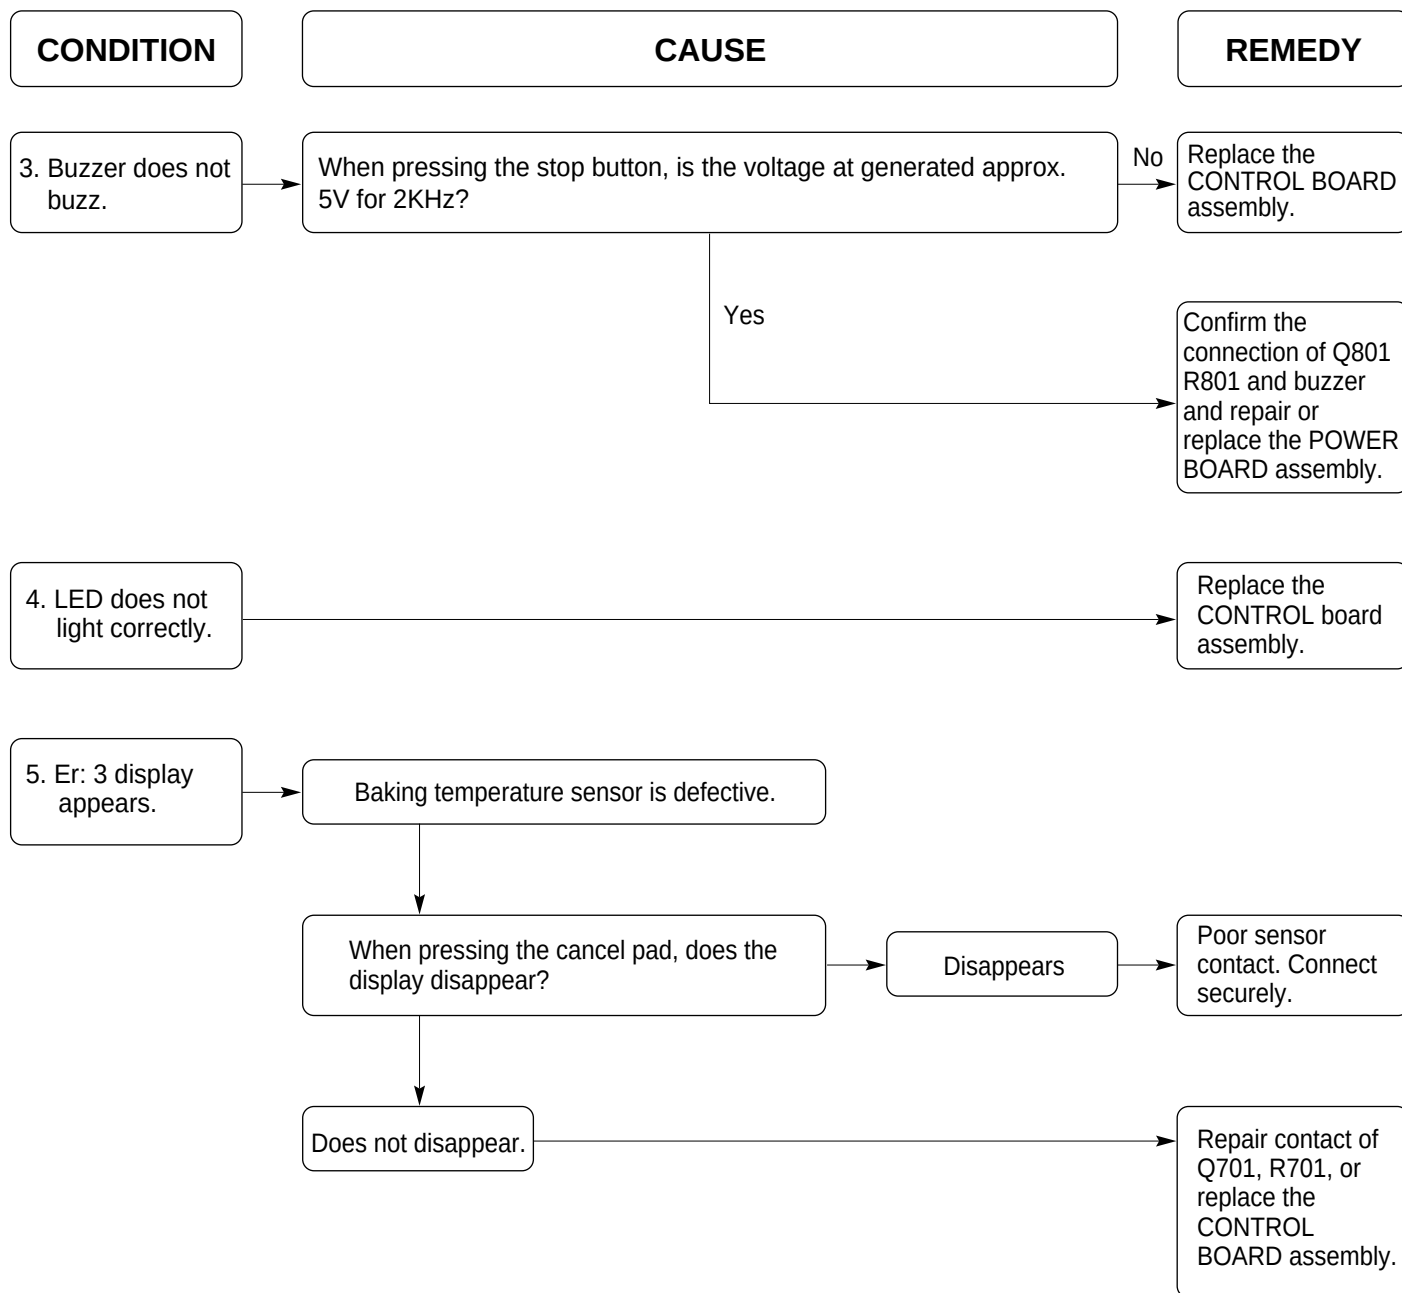


DISASSEMBLY INSTRUCTION


- **PAY ATTENTION TO THE FOLLOWING IN SERVICE AND INSPECTION.**

- (a) Protect against electric shock:
Pull out the plug for service and inspection. Don't touch live components when service and inspection are made.
- (b) Restore the original conditions of components and wire layout; Safety provisions are made by using tube and the other insulation material and by preventing wire from contact with heat generating or movable components by means of layout and binding. They should be restored to the original conditions.
- (c) Safety inspection after service is required as follows: confirm that screws, nuts, components, and wires removed for service are restored. Check the deterioration around service components, and check for insulation.


- 1.** Turn the Top Cover assembly upside down and pull out the inner cover and the viewing window.

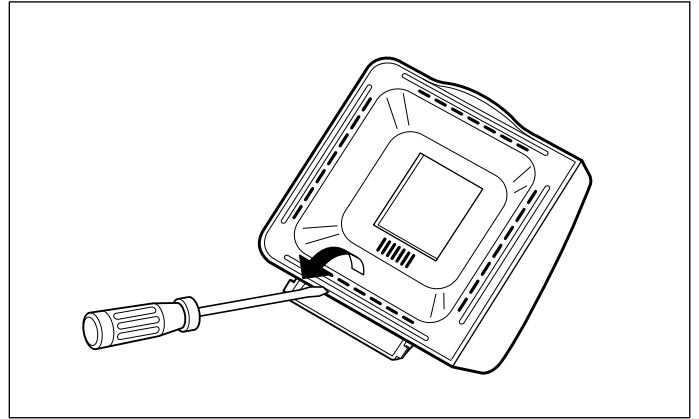


- 2.** Pull out the control panel.

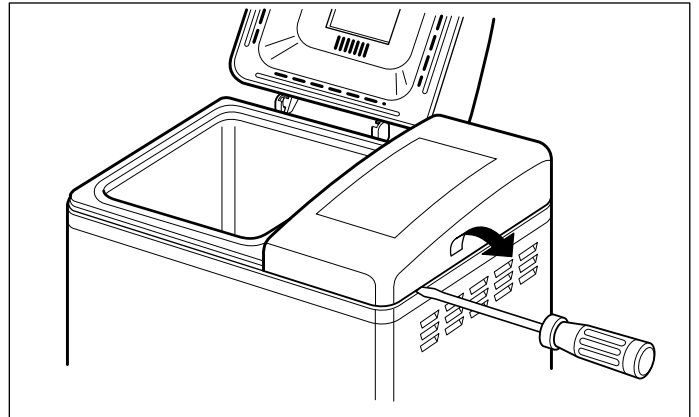


- 3.** After disconnecting leads, remove the oven case main assembly from the chassis by unscrewing two machine screws fixing oven case main assembly.
- 4.** Remove the leadwire assembly and sheath heater assembly from the oven case main assembly.

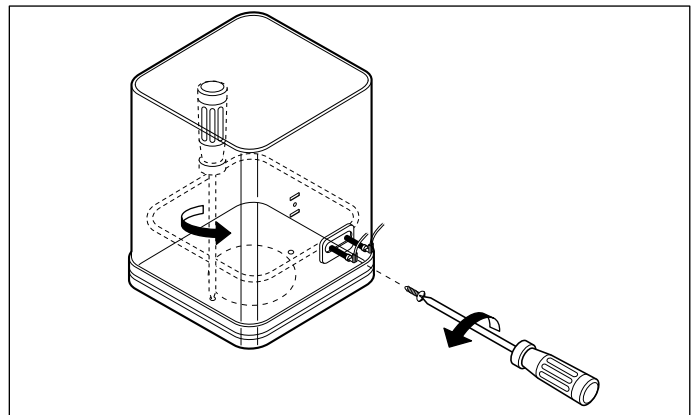


-
- 5.** Turn the breadmaker upside down. Remove four legs and base cover by unscrewing. Pull out the power cord assembly on the bottom of the unit. Remove the chassis assembly from the out case.

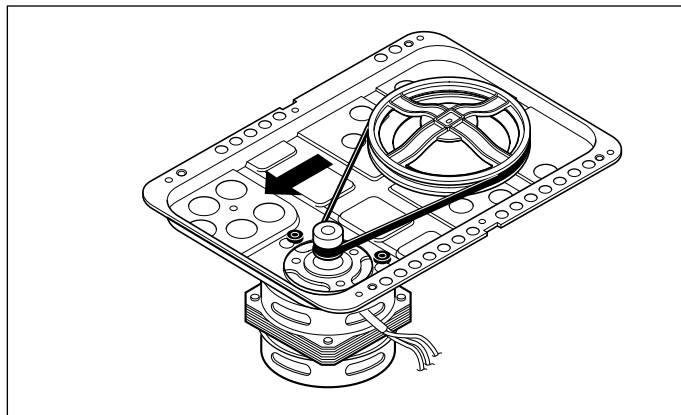


- 6.** Remove the poly V-belt.
Remove nut and pulley washer, then kneading pulley can be disconnected.
Remove the E-ring, washer, and pulley shaft assembly.

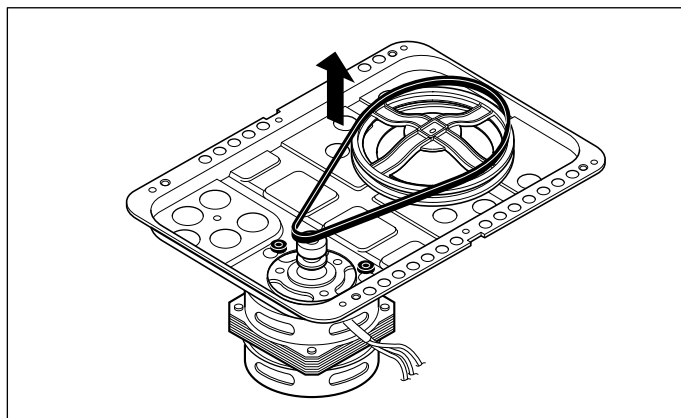

- 7.** Remove the motor pulley from the motor shaft by removing one machine screw. Remove three fixing screws, then the kneading motor and motor cushion can be disassembled.

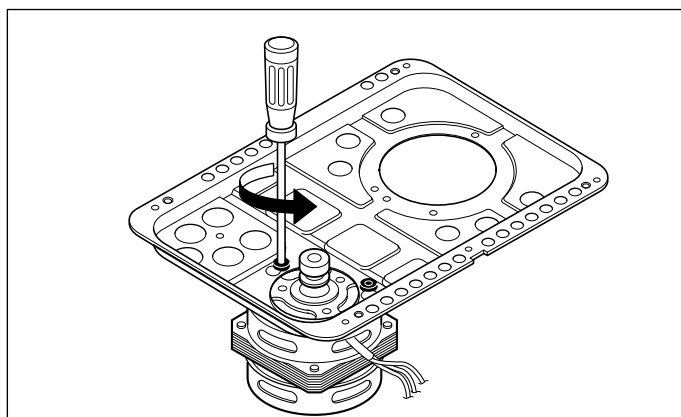


8. Turn the chassis upside down and remove the oven base and the capacitor.

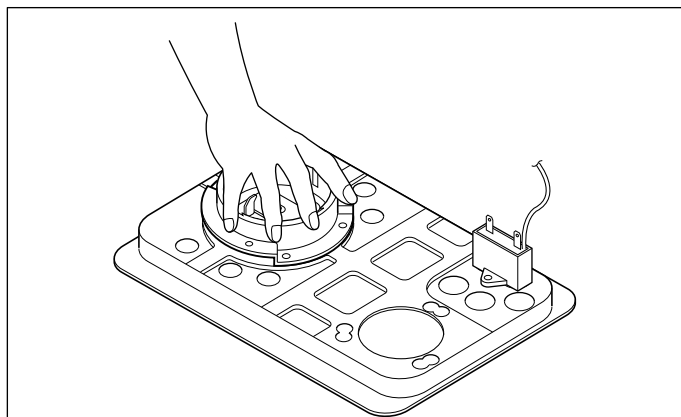




CAUTION


When you reassemble the kneading pulley, poly V-belt, and motor pulley after service or repair; adjust the center of the kneading pulley, poly V-belt, and motor pulley as follows.

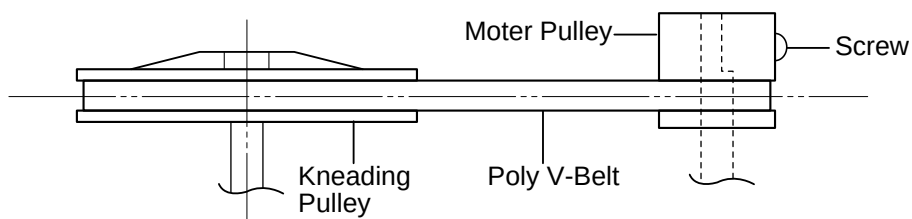


EXPLODED VIEW & PARTS LIST

A. EXPLODED VIEW

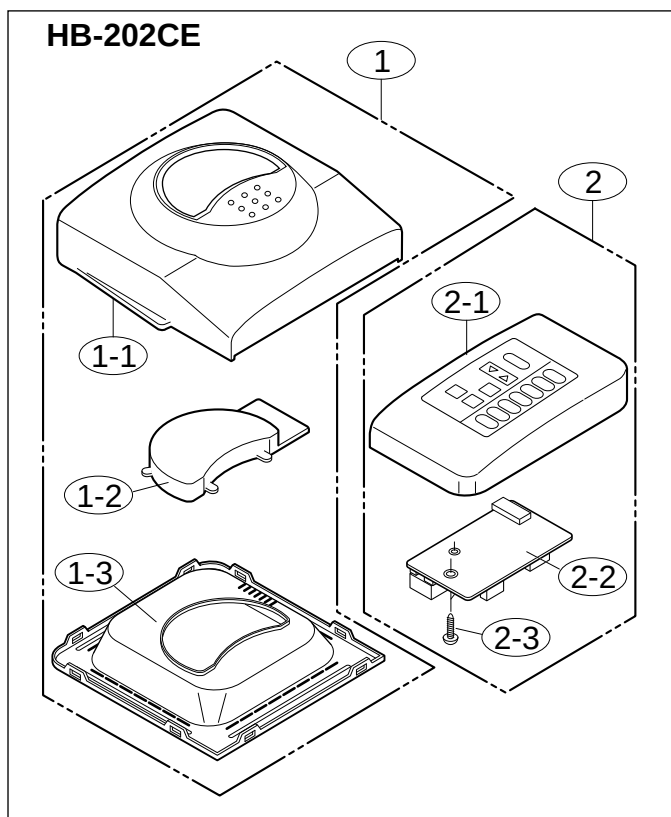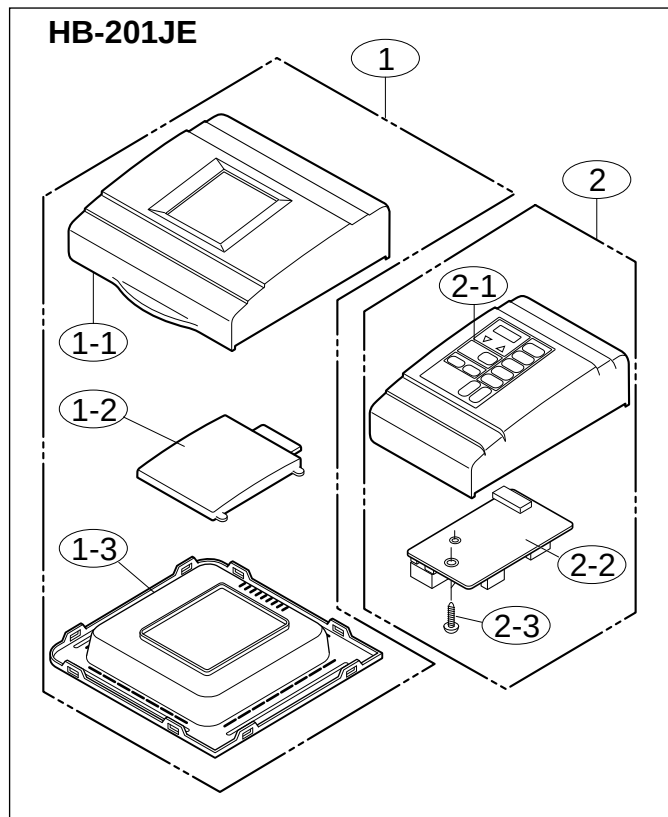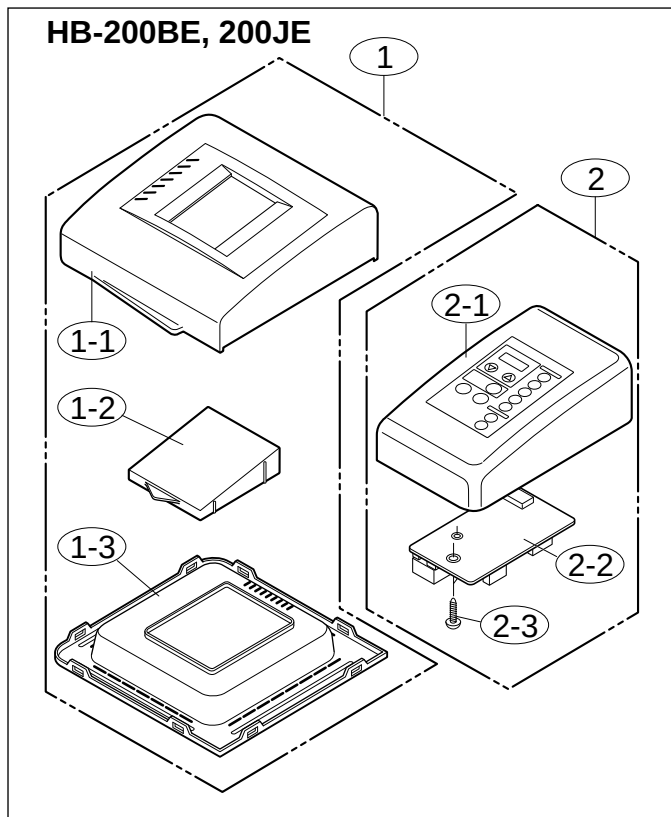

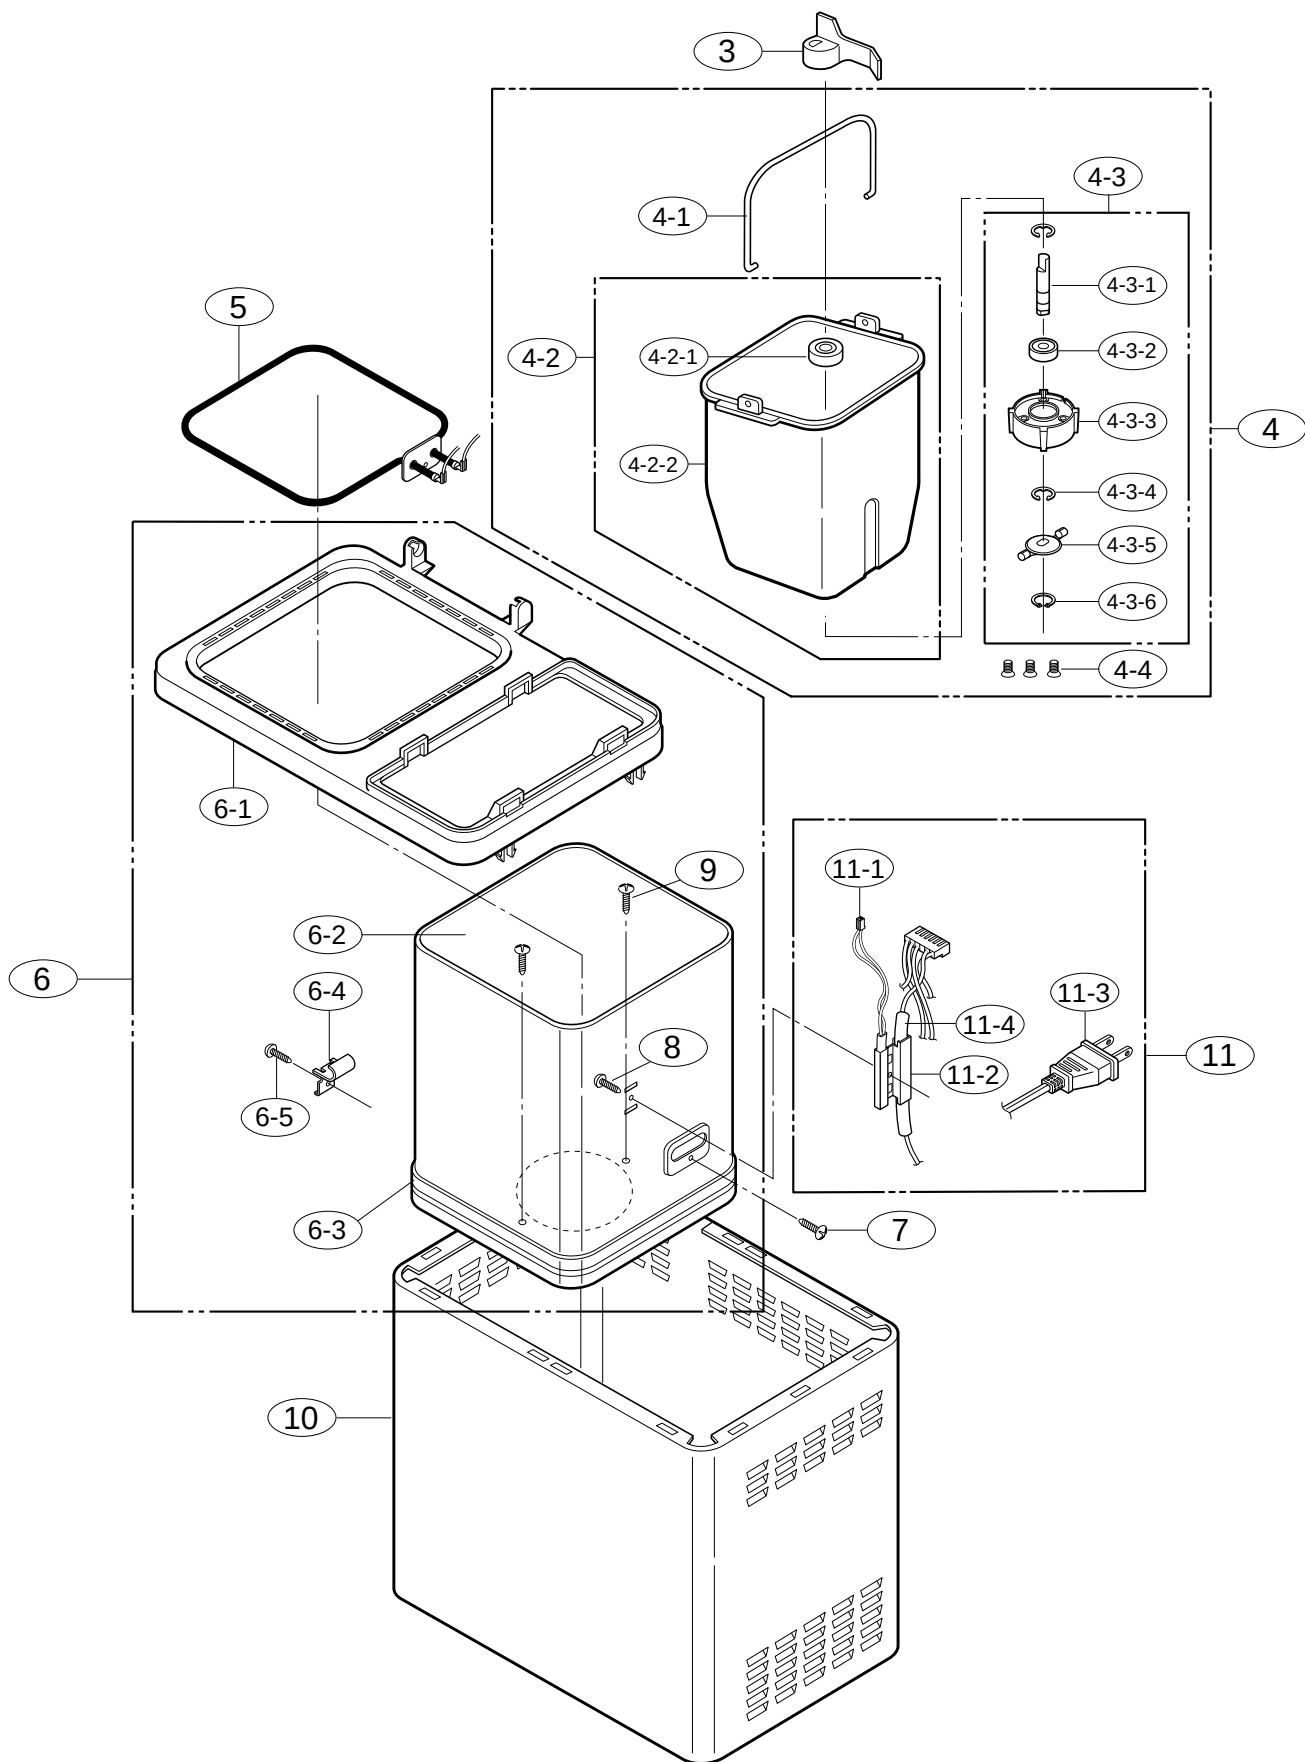

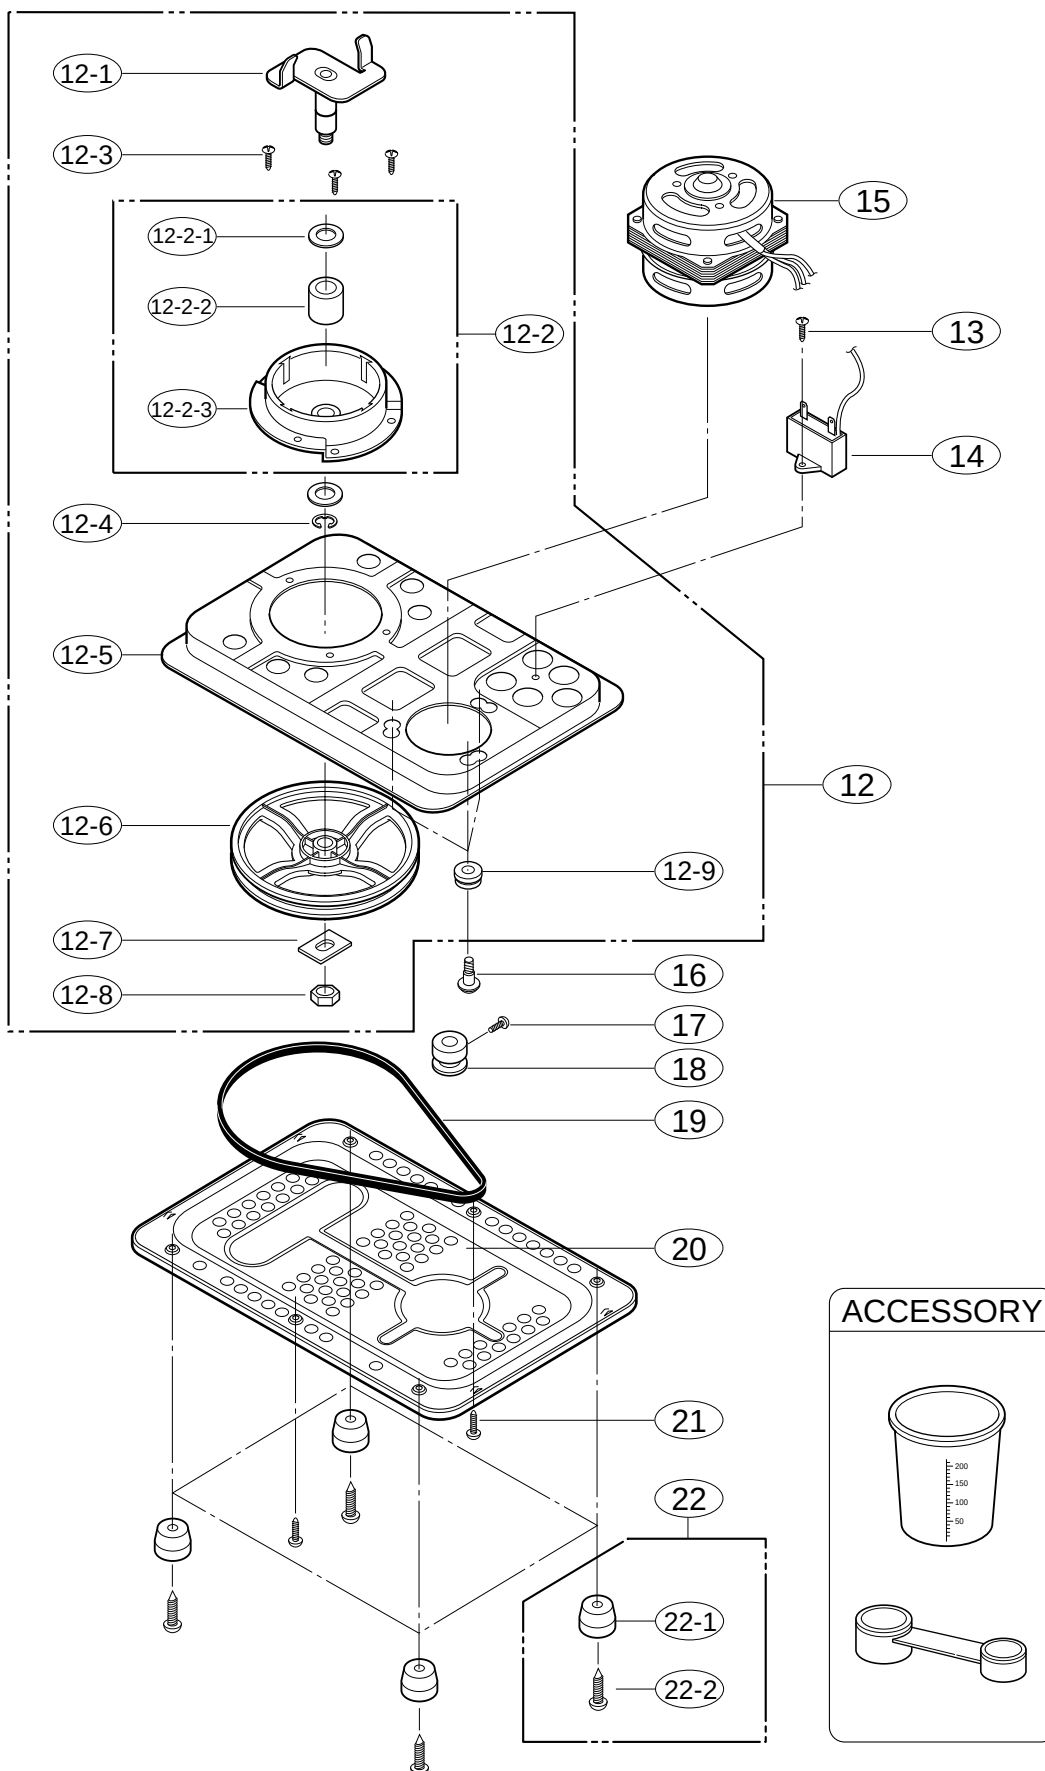

B. PARTS LIST

NSP : NOT SERVICEABLE PARTS

LOCA. No.	DESCRIPTION	PART No.			Q'TY	SVC MARK	REMARKS
		HB-200E	HB-201E	HB-202E			
1	TOP COVER ASM	3551FB2103A	3551FB2106A	3551FB2096A	1		
				3551FB2096C	1		110V/60Hz, CE
1-1	TOP COVER	3122FB1056A	3122FB1072A	3122FB1069A	1	NSP	
1-2	VIEWING WINDOW	3790FB3092A	3790FB3093A	3790FB2094A	1	NSP	
1-3	INNER COVER	3550FB2068A	3550FB2101A	3550FB2095A	1	NSP	
2	CONTROLLER ASM	4781FB2104A				NSP	120V/60Hz, BE
		4781FB2104B	4781FB2107A			NSP	120V/60Hz, JE
				4781FB2097A		NSP	120V/60Hz, CE
		4781FB2104D				NSP	120V/60Hz, CB
			4781FB2107B			NSP	230V/50Hz, JE
		4781FB2104C		4781FB2097B		NSP	230V/50Hz, CE
				4781FB2097F		NSP	110V/60Hz, CE
2-1	CONTROL PANEL	3572FB1057A	3572FB1073A	3572FB1070A	1		
2-2	P.W.B ASM	6871FX1009A			1		120V/60Hz, BE
		6871FX1009E	6871FX1010A				120V/60Hz, JE
				6871FX1011A			120V/60Hz, CE
		6871FX1023A					120V/60Hz, CB
			6871FX1010C				230V/50Hz, JE
		6871FX1018C		6871FX1011C			230V/50Hz, CE
				6871FX1011F			110V/60Hz, CE
2-3	SCREW		1TTL0402818		2	NSP	D4 X L12
3	KNEADING BLADE		5832FB3011A		1		
4	OVEN ASM		5306FB2100A		1		
4-1	OVEN HANDLE		3650FB4015A		1		
4-2	OVEN+WATERSEAL		5306FB5065B		1		
4-2-1	OVEN-2		5306FB1024A		1	NSP	
4-2-2	WATER SEAL		4O80054A		1	NSP	230V/50Hz
4-3	OVEN BODY ASM		3071FB3103A		1		
4-3-1	OVEN SHAFT		4370FB4086A		1	NSP	
4-3-2	BALL BEARING		4280FB4016A		1	NSP	230V/50Hz
4-3-4	E-RING		4O80070A		2	NSP	
4-3-5	OVEN ARM		4260FB4085A		1	NSP	
4-3-6	C-RING		-		1	NSP	
4-4	SCREW		1MCC0402422		3	NSP	D4 X L8
5	HEATER ASM		5301FB2059A,E		1		120V
			5301FB2059B				230V
6	OVEN CASE ASM		3111FB2105A		1		
6-1	RIM		3062FB1054A		1	NSP	
6-2	OVEN CASE-M		3110FB1039A		1	NSP	
6-3	OVEN CASE-L		3110FB2056A		1	NSP	

LOCA. No.	DESCRIPTION	PART No.			Q'TY	SVC MARK	REMARKS
		HB-200E	HB-201E	HB-202E			
6-4	HEATER HOLDER	4930FB4072A			1	NSP	
6-5	SCREW	1MPC0402422			1	NSP	D4 X L8
7	SCREW	1MPC0402422			1	NSP	D4 X L8
8	SCREW	1TPL0402422			1	NSP	D4 X L8
9	SCREW	1TPL0402422			2	NSP	D4 X L8
10	OUT CASE	3112FB1038A			1		
11	LEADWIRE ASM	6877FB2067A			1		120V/60Hz
		6877FB2108A					230,240V/50Hz
		6877FB2108C					230V,240V50Hz(SWISS)
		6877FB2108D					230V,240V50Hz(U,K)
11-1	BAKING SENSOR ASM	6501FB3079A			1	NSP	
11-2	FUSE BRACKET	4810FB4074A			1	NSP	
11-3	POWER CORD ASM	6411FB3082A			1	NSP	120V/60Hz
		6411FB3097A				NSP	230V/50Hz
		6411FB3104B				NSP	230V/50Hz(SWISS)
		6411FB3104C				NSP	230V/50Hz(U.K)
11-4	THERMAL FUSE	0FBZFB3084A			1	NSP	G4A00144
12	CHASSIS ASM	3141FB2058A			1		NO TAPPING
		3141FB2058B					TAPPING
12-1	PULLEY SHAFT ASM	4371FB3078A			1		
12-2	OVEN BASE ASM	3040FB5061C			2		
12-2-1	WASHER-X	4O20017F			2	NSP	
12-2-2	OILLESS BEARING	4280FB4078A			1	NSP	
12-2-3	OVEN BASE	3040FB3077A			1	NSP	
12-3	SCREW	1TPL0402618			3	NSP	D4 X L10
12-4	E-RING	4O80070A			1	NSP	
12-5	CHASSIS	3140FB1040A			1	NSP	NO TAPPING
		3140FB1040B				NSP	TAPPING
12-6	KNEADING PULLEY	4560FB2060A			1		
12-7	PULLEY WASHER	4O80012A			1	NSP	
12-8	NUT	1NHA0500018			1	NSP	D5
12-9	MOTOR CUSHION	4O80051A			3	NSP	
13	SCREW	1TTL0402622			1	NSP	D4 X L10
14	CAPACITOR	6120FB3087A			1		10μF(120V)
		6120FB3087B					8μF(230V)
15	KNEADING MOTOR	4681FB2012F			1		120V/60Hz
		4681FB2012H					230V/50Hz
16	FIXING SCREW	4000FB4022A			3		120V
		4000FB4022B					230V

LOCA. No.	DESCRIPTION	PART No.			Q'TY	SVC MARK	REMARKS
		HB-200E	HB-201E	HB-202E			
17	SCREW	1MPC0402618			1	NSP	D4 X L10
18	MOTOR PULLEY	4O80018A			1		
19	V-BELT	4400FB3086A			1		DAYCO
		3O80020B					BANDO
20	BASE COVER	3550FB2061A			1		
21	SCREW	1TTL0402622			2	NSP	D4 X L10
22	LEG ASM	4O80144B			4		
22-1	LEG	4778FB4069A			4	NSP	
22-2	SCREW	4000FB4071B			4	NSP	D4
	MEASURING CUP	4O80031A			1		OPTIONAL
	MEASURING SPOON	4O80080A			1		OPTIONAL

PREFACE

1. SAFETY PRECAUTIONS

Follow basic safety precautions before using electrical appliances.

1. **READ ALL INSTRUCTIONS.**
2. To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquid.
3. Do not touch hot surfaces. Always use oven mitts when handling the hot bread pan of bread.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug the unit from the outlet when not in use and before cleaning. Allow the breadmaker to cool before attaching or removing parts.
6. Do not touch moving parts.
7. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or it has been dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or mechanical adjustment.
8. Attachments that are not recommended or sold by the appliance manufacturer should not be used.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
11. Do not place on or near a gas or electric burner, or in a heated oven.
12. To disconnect, grip the plug and pull it out from the wall outlet. Never pull the cord.
13. Do not use the appliance for other than the intended use.
14. This product is intended for household use only.

2. SERVICING PRECAUTIONS

The following cautions should be observed when troubleshooting.

- a) As the appliance is made to be serviced only by properly qualified service personnel, it cannot be repaired by the user.
- b) Before servicing, you should keep your hands dry. The power cord must be unplugged to protect electrical hazards.
- c) Wear gloves when assembling or disassembling the appliance to avoid being injured by a sharp edge.


3. INSTALLATION INSTRUCTIONS

- a) Place the breadmaker allowing at least 4-inch air space around sides and top of the breadmaker.
- b) Always place the breadmaker on a heat-proof counter top or table during operation.
- c) This breadmaker must be placed on a firm, flat, and solid surface.
- d) 120V/60Hz rated Bread Machine has a polarized plug : one blade is wider than the other.
230V/50Hz rated Bread Machine has to be earthed.
- e) Extension cords are available and may be used if care is exercised in their use.
♦ EXTENSION CORD IS USED ♦
 1. The marked electrical rating of the extension cord should be at least as great as the appliance.
 2. The longer cord should be arranged so it will not drape over the counter top or tabletop where it can be pulled by children or tripped over.


OPERATING INSTRUCTIONS

1. FEATURES AND CONTROL PANEL


A. FEATURES

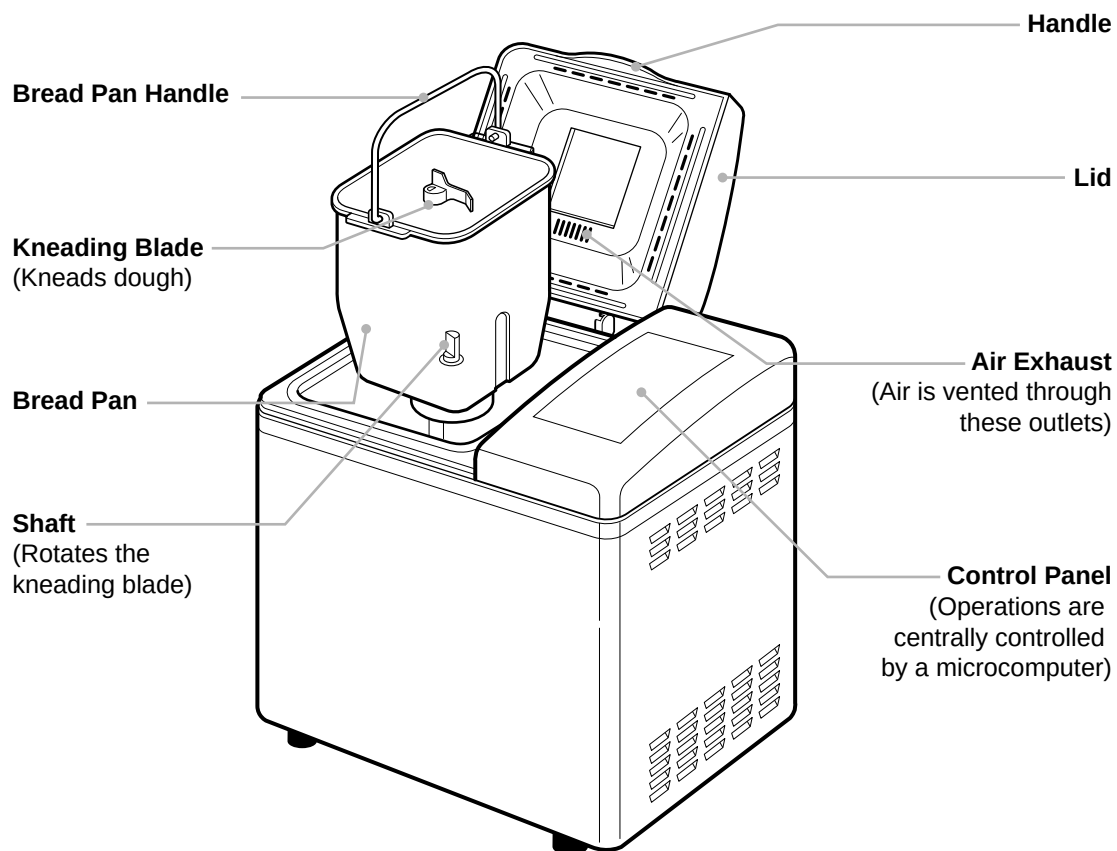

ACCESSORIES

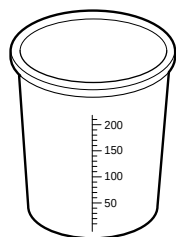


Measuring Cup

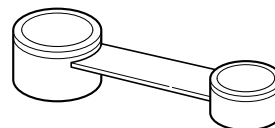

Measuring Spoon (OPTION)

B. CONTROL PANEL

✱ Control panel layout may vary according to the model

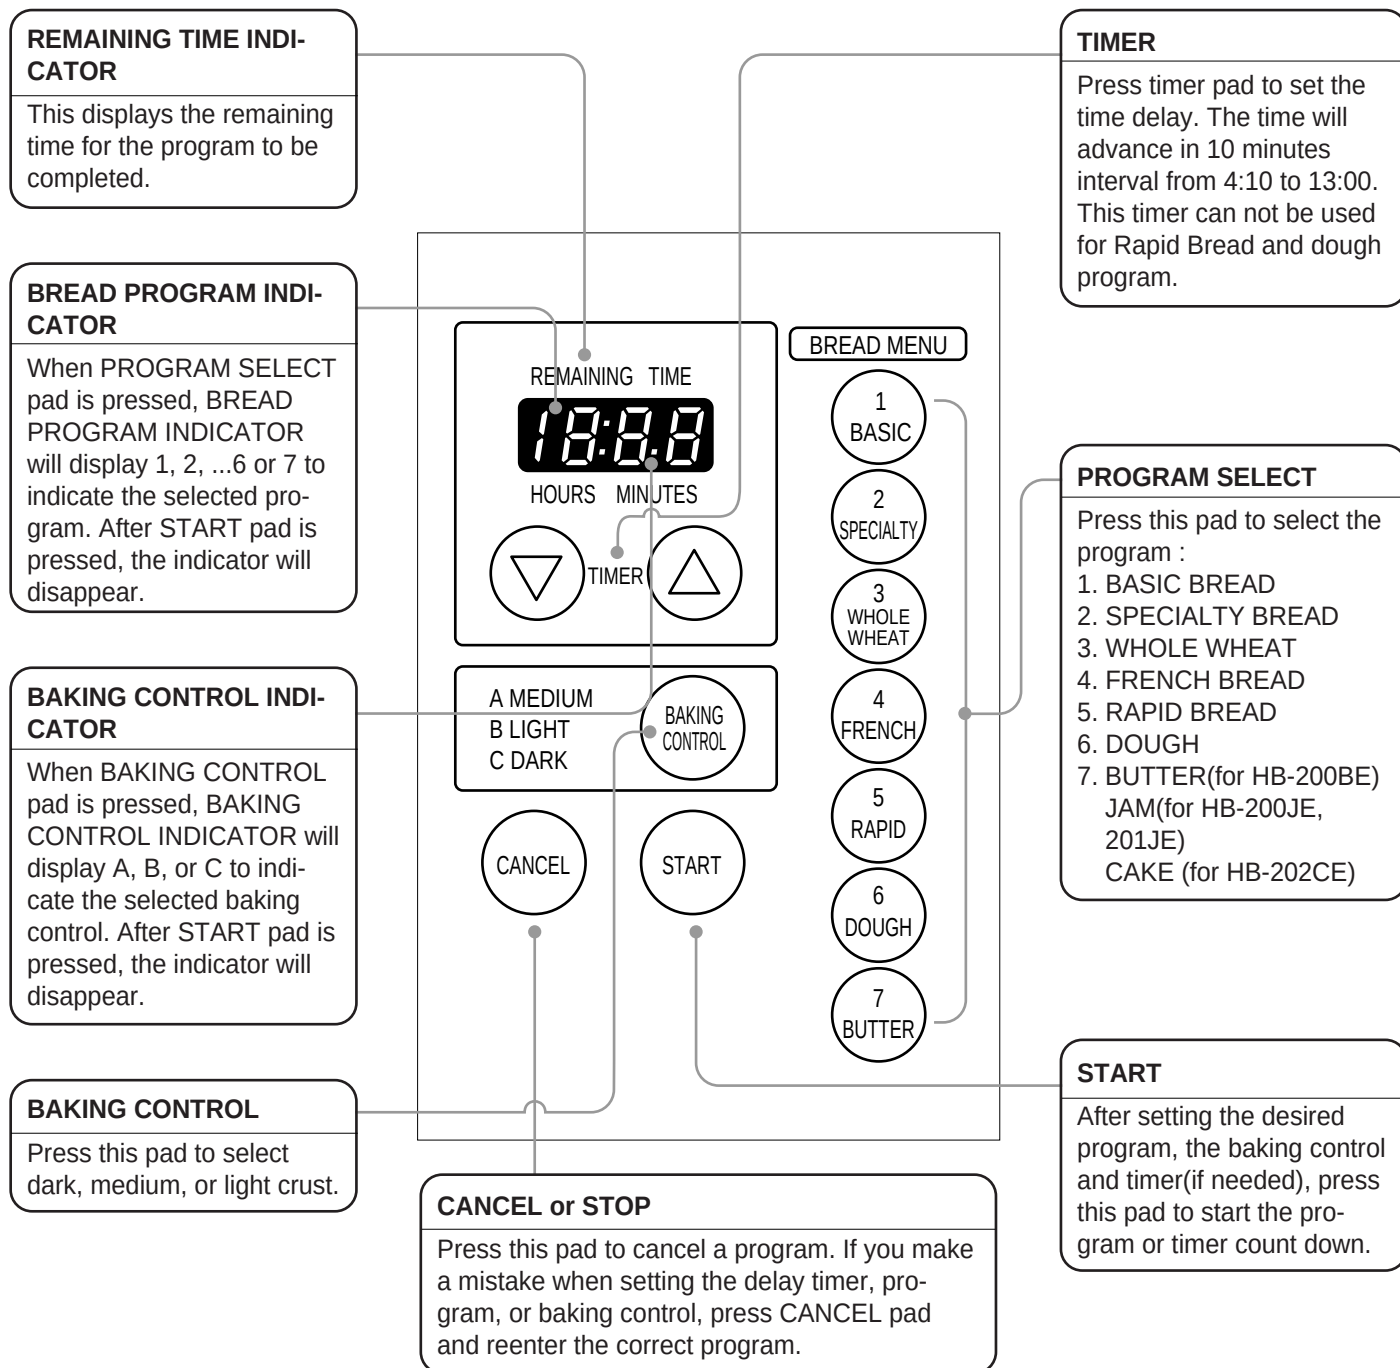

NOTE

If you want to cancel the selected program, press the CANCEL pad for more than 1 second at any time during the cycle.

2. OPERATION CHECK

After installation or repair, the following sequence and results should be checked.


1. GENERAL OPERATION CHECK

(a) Plug the power cord into a prolonged electrical outlet.

(b) The REMAINING TIME display **1 A** and Basic Bread is set already.


(c) **Check the PROGRAM SELECT.**

Press the PROGRAM SELECT pad, then REMAINING TIME will advance as follows:

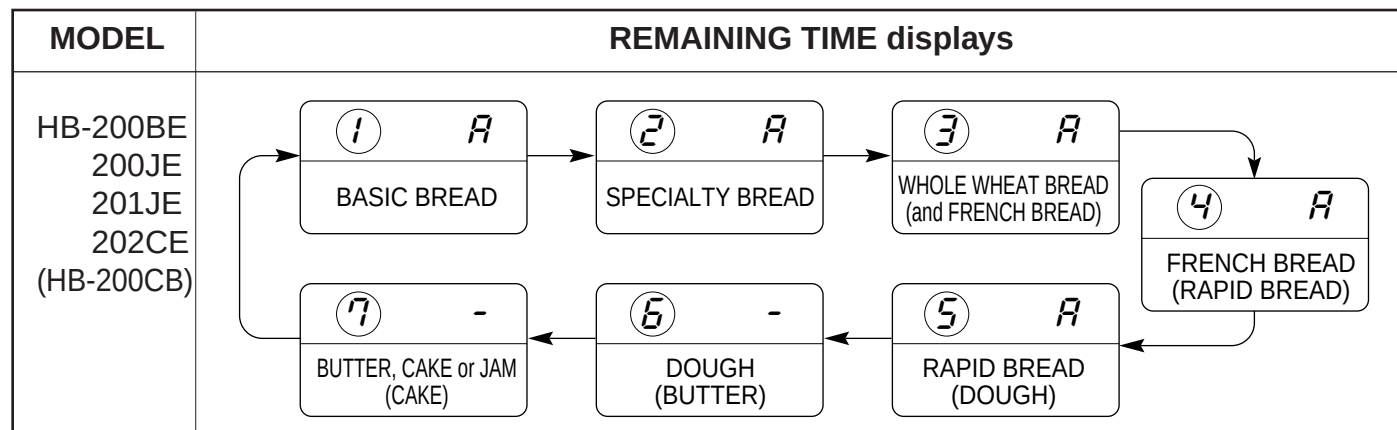

(d) **Check the BAKING CONTROL** (except for BUTTER, CAKE or JAM and DOUGH program).

Press the BAKING CONTROL pad, then the REMAINING TIME will advance as follows:

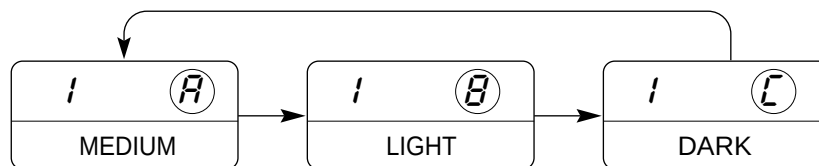

(e) **Check the TIMER**

Set the timer for how long you want to wait before the bread is done (from 4:10 to 13:00 in 10 minutes interval).

1) Press TIMER UP PAD(▲) once, the REMAINING TIME DISPLAY 4:10.

2) When constant pressure is applied to the pad, the time will advance quickly from 4:10 to 13:00.

3) After 13:00 is set, press once more, then the REMAINING TIME displays 4:10.

4) If you pass the time that you wanted, press TIMER DOWN PAD (▼) to go back.

(f) After selecting PROGRAM SELECT and BAKING CONTROL, press the START pad. Then the colon on the REMAINING TIME blinks to indicate that the breadmaker starts to operate.

(g) Press the CANCEL(STOP) pad to cancel all baking processes. If the START pad is already pressed, just press the CANCEL(STOP) pad and hold for MORE THAN 1 SECOND.

CAUTION

1. The TIMER can not be used in BUTTER, CAKE AND JAM.

2. After setting the time, press the START pad to operate the breadmaker. Check to see if the colon blinks.

2. TEST KEY PROGRAM CHECK

You can check the operating of each load by using the self-diagnosis program.

(a) OPERATION CHECK


- 1) When power is supplied while pressing the TIMER UP PAD (▲) and TIMER DOWN PAD (▼) at the same time, the self-diagnosis program will start.
- 2) After checking 1), press the START pad, then the process will advance as follows.

REMAINING TIME display	<i>P: 1</i>	<i>P: 2</i>	<i>P: 3</i>	<i>P: 0</i> → <i>P: 1</i> →
OPERATION	Kneading motor	Heater	No operation	

- 3) After 25 seconds from the starting points of processing, or if the CANCEL(STOP) pad is pressed, the self-diagnosis program will be canceled.

(b) LED CHECK

- 1) When power is supplied while pressing the BASIC and WHOLE WHEAT pads at the same time, the self-diagnosis program will start as follows.

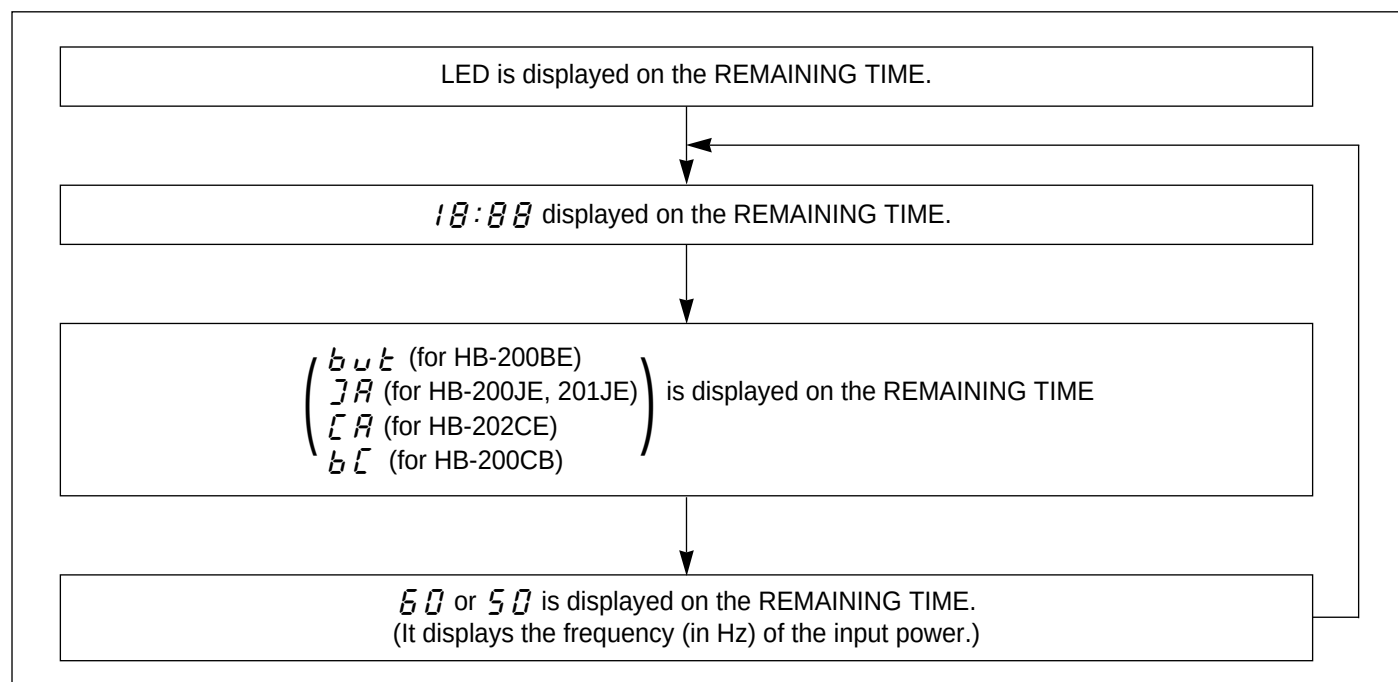

(c) **BAKING PROCESS CHECK** (for the only BASIC BREAD)


- 1) When power is supplied while pressing the START pad and CANCEL(STOP) pad at the same time, the self-diagnosis program will start.
- 2) After checking the REMAINING TIME ($\overline{1H}$ displayed with beeps), press the START pad.
- 3) The breadmaker starts to operate and the baking process will advance as follows.

Baking Process	Time set	Mix	1st Knead	Rest	2nd Knead	1st Rise	Gas Squeeze	2nd Rise	Gas Squeeze	3rd Rise	Bake	Cool	Warm	End
REMAIN-ING Time	0:00	3:40	3:38	3:33	3:28	3:16	2:37	2:36	2:11	2:10	1:10	0:20	[:H]	END
Baking Process indicator (OPTION)	-	KNEAD				RISE					BAKE	COOL	-	-

- 4) During checking 3), if the START pad was not pressed, the process will advance to the next process according as time pass.
- 5) After checking 4), press the CANCEL(STOP) pad to cancel the self-diagnosis program.

3. BREADMAKING PROGRAM

3-1) EXPLANATION OF BASIC PROGRAM (BASIC BREAD)

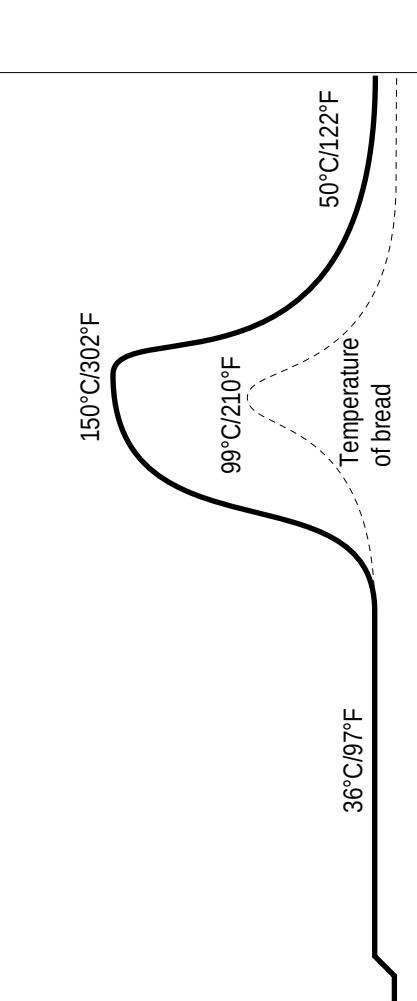Process	Time Delay	1st Knead		Rest	2nd Knead	1st Rise	Gas Squeeze	2nd Rise	Gas Squeeze	3rd Rise	Bake	Cool	Warm	End	
Time	Max 8:50	2min.	5min.	5min.	12min.	40min.	4sec.	26min.	4sec.	60min.	Approx. 50min.	Approx. 20min.	3hours	-	
Remaining Time	Max 13:00	3:40	3:38	3:33	3:28	3:16	2:37	2:36	2:11	2:10	1:10	0:20	[:H]	End	
Process Indicator (OPTION)	Time Set	Knead		Rise		Bake		Cool		On/Off		-		-	
Heater	On/Off														-
Kneading Motor	Off	On/Off	On	Off	On	Off	On	Off	On	Off		-			
Temperature of oven case															
Micro-Computer Control	Time Delay	Knead		Rise		Bake		Cool		Warm		End			
	The temperature is controlled at 25°C (77°F).	Breadmaker starts to operate intermittently to proof flour splashed for 2 minutes. After mixing flour with water, kneading blade rotates with 250rpm for 5 minutes. After resting for 23 minutes, rotation again for 12 minutes. During knead and rest courses, the temperature is maintained at 30°C (86°F) by using the sensor and heater.		Accurate temperature control is essential during rising, (Dough temperature: Approx. 36°C (97°F). Microcomputer controls the power supply accurately to keep suitable dough temperature.		Bread is baked with high power. Bread is baked with a crisp golden crust and a fluffy inside.		Immediately after baking, bread can not be eaten because it's too hot.		Breadmaker maintains the bread at a suitable temperature (60°C/140°F) for 3 hours.		-			

3-2) PROGRAM SPECIFICATIONS

(1) Basic Bread (3:40)

Remark	Timer	Knead				Rise					Bake	Cool	Warm
		Mix	1' Knead	Rest	2' Knead	1' Rise	G/Squeeze	2' Rise	G/Squeeze	3' Rise			
Time	13hr	2min.	5min.	5min.	12min.	40min.	4sec.	26min.	4sec.	60min.	50min.	20min.	3hr

(2) Specialty Bread (3:40)

▼ Beep sounds 9 minutes before the end of 2nd kneading

Remark	Timer	Knead				Rise					Bake	Cool	Warm
		Mix	1' Knead	Rest	2' Knead	1' Rise	G/Squeeze	2' Rise	G/Squeeze	3' Rise			
Time	13hr	2min.	5min.	5min.	12min.	40min.	4sec.	26min.	4sec.	60min.	50min.	20min.	3hr

(3) Whole Wheat Bread (4:00)

▼ Beep sounds 9 minutes before the end of 2nd kneading

Remark	Timer	Pre Heat	Knead				Rise					Bake	Cool	Warm
			Mix	1' Knead	Rest	2' Knead	1' Rise	G/Squeeze	2' Rise	G/Squeeze	3' Rise			
Time	13hr	20min.	2min.	11min.	50min.	12min.	20min.	4sec.	15min.	4sec.	40min.	50min.	20min.	3hr

(4) French Bread (4:00)

▼ Beep sounds 9 minutes before the end of 2nd kneading

Remark	Timer	Pre Heat	Knead				Rise					Bake	Cool	Warm
			Mix	1' Knead	Rest	2' Knead	1' Rise	G/Squeeze	2' Rise	G/Squeeze	3' Rise			
Time	13hr	20min.	2min.	11min.	50min.	12min.	20min.	4sec.	15min.	4sec.	40min.	50min.	20min.	3hr

(5) Rapid Bread (1:59)

▼ Beep sounds 5 minutes before the end of 2nd kneading

Remark	Timer	Knead				Rise					Bake	Cool	Warm
		Mix	1' Knead	Rest	2' Knead	1' Rise	G/Squeeze	2' Rise	G/Squeeze	3' Rise			
Time	13hr	2min.	5min.	5min.	7min.	13min.	4sec.			52min.	35min.		3hr

(6) Dough (1:03)

Remark	Remaining	Knead				Rise	
		Mix	1' Knead	Rest	2' Knead	1' Rise	G/Squeeze
Time	13hr	2min.	4min.	5min.	12min.	40min.	4sec.

(7) Butter

Remark	Timer	Knead
Time		01min.~30min.

(9) Jam (1:20)

Remark	Timer	Pre Bake	Bake	Cool
Time		10min.	60min.	10min.


(8) Cake (1:10)

Remark	Timer	Bake	Cool	Warm
Time		60min.		3hr 10min

NOTE

1. The Specialty Bread, Whole Wheat Bread, and French Bread Programs contain an audible signal (8 beeps) which sounds 9 minutes before the end of the 2nd knead (5 minutes before the end of the 2nd knead for Rapid Program). For specialty bread, add additional ingredients at this time (i.e. raisins, nut, vegetables, etc.).
2. The Basic Bread, Specialty Bread, Whole Wheat Bread, and French Bread Programs contain an audible signals (4 beeps) at the end of the baking cycle (20 minutes of cooling time remain).
3. The beeper beeps 8 times at the end of each program to indicate the program is finished.

SCHEMATIC DIAGRAM

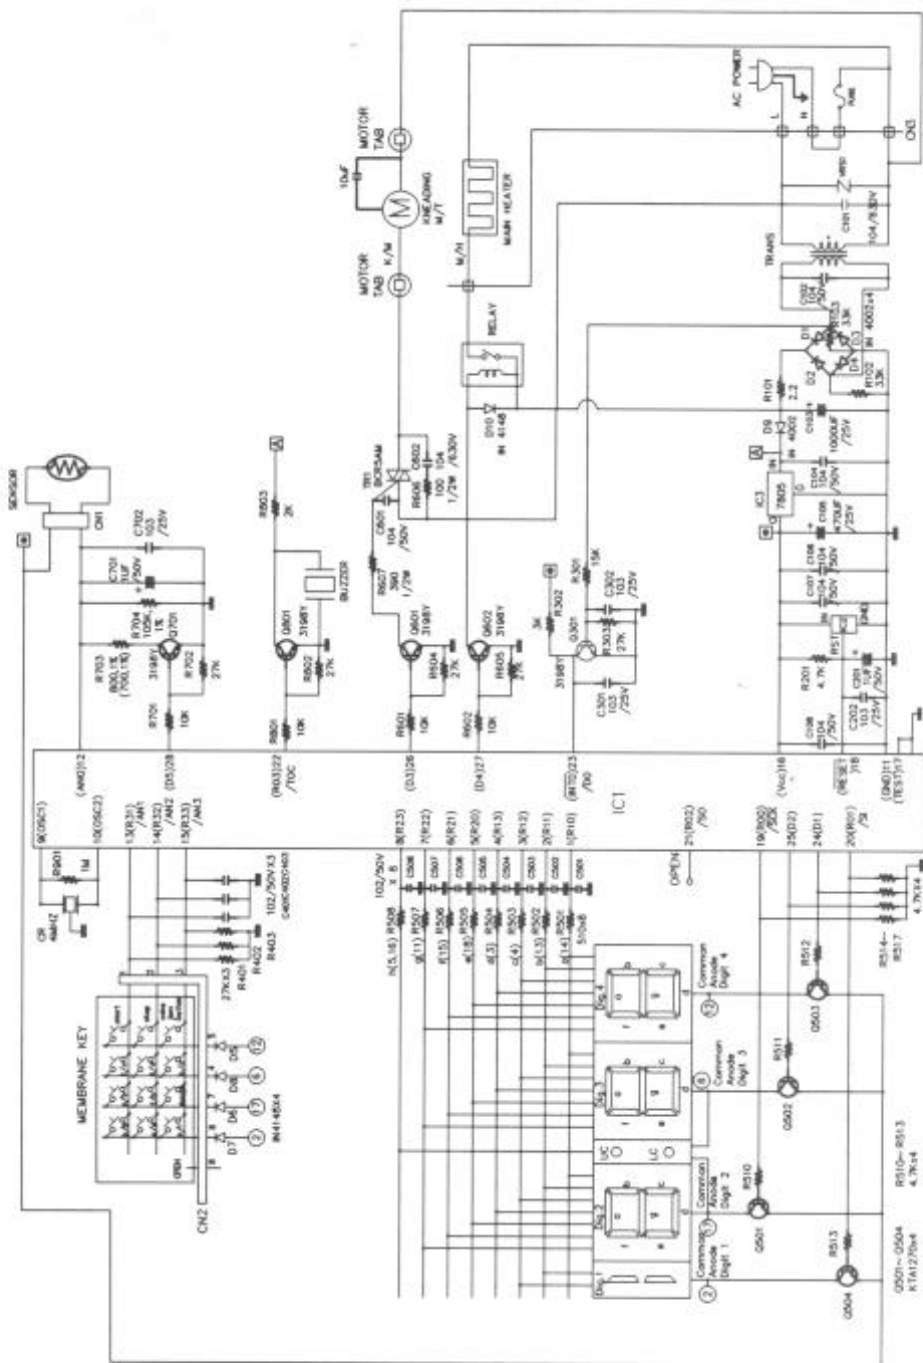

CONTROLLER PARTS LIST

LOCA. No.	DESCRIPTION	PART No.			Q'TY	SVC MARK	REMARKS
		HB-200E	HB-201E	HB-202E			
1	P.W.B	6870FX5001A			1		
2	LSI(MASK)	0IHI404344L			1		BE,60Hz
		0IHI404344M					JE,60Hz
				0IHI404344N			CE,60Hz
		0IHI404344R					CB,60Hz
			0IHI404344P				JE,50Hz
		0IHI404344Q		0IHI404344Q			CE,50Hz
3	RELAY	6920FX5003A			1		
		CQ65115D					
4	TRIAC	CQ33025A			1		
5	7-SEGMENT	6327FX3001A			1		
6	IC(REGULATOR)	0IKE780500H			1		
7	BUZZER	6908FX4003A			1		
8	C.RESONATOR	CQ74157A			1		
9	RESET IC	0IKE704200A			1		
10	TRANSISTOR	0TR319809AA			5		
11	TRANSISTOR	0TR127009AA			4		
12	DIODE.R	0DD139209AA			5		
13	DIODE.S	0DD414809AB			5		
14	M.TRANS	6170FX2002A			1		120V/60Hz
		6170FX2002H					230V/50Hz
15	VARISTOR	CQ39127A			1		
16	RESISTOR, FIXED	0RD0221F608			1		
17	RESISTOR, FIXED	0RD1002F608			4		
18	RESISTOR, FIXED	0RD2702F608			8		
19	RESISTOR, FIXED	0RD1004F608			1		
20	RESISTOR, FIXED	0RD4701F608			9		
21	RESISTOR, FIXED	0RD0221G608			1		
22	RESISTOR, FIXED	0RD3302F608			2		
23	RESISTOR, FIXED	0RD5100F608			8		
24	RESISTOR, FIXED	0RD3001F608			1		
25	RESISTOR, FIXED	0RD1502F608			1		
26	RESISTOR, MET	0RS1000H609			1		
27	RESISTOR, MET	0RS3900H609			1		
28	RESISTOR, MET	0RN1053F408			1		
29	RESISTOR, MET	0RN8000F408			1		
30	CERAMIC, CAPA	0CK1040K948			5		
31	CERAMIC, CAPA	0CK1030H948			4		
32	CERAMIC, CAPA	0CK1020K518			11		
33	ELECT, CAPA	0CE1081H618			1		

LOCA. No.	DESCRIPTION	PART No.			Q'TY	SVC MARK	REMARKS
		HB-200E	HB-201E	HB-202E			
34	ELECT, CAPA	0CE4771H618			1		
35	ELECT, CAPA	0CE1051K638			2		
36	C, METAL	0CQ1041K509			1		
37	C, METAL	0CQ1041Y539			2		120V
38	P.P FILM CAPACITOR	3O80046A			2		220/230/240V
39	CONNECTOR	6630FX4002A			1		
40	CONNECTOR	6630FX4001A			1		
41	WAFER	4H90045A			1		
42	TAB	4I72022A			2		